



NJoy32 Family Controllers Configuration Utility

User guide

V. 2.10, 04.03.2018.

©2018 VKB. All rights reserved.

©2018 Written by VictorUs. All rights reserved

Table of content

Chapter1.

Overview.....	11
1.1. Hardware and software requirements	11
1.2. What` s new	11
1.2.1. V.2.7.....	11
1.2.2. V.2.8	12
1.2.3. V. 2.9	12
1.2.4. V.2.10.....	12

Chapter2.

Using configurator.....	13
2.1. Interface.....	13
2.1.1. Device info.....	13
2.2. Firmware upgrade	14
2.2.1. Software activation	14
2.2.2. Hardware activation	15
2.3. Common parameters	16
2.3.1. Global variables	16
2.4. Additional parameters	17
2.4.1. Control item number	17
2.4.2. Sampling rate.....	17
2.4.3. Automatic calibration time.....	17
2.4.4. Tempo Time.....	17
2.4.5. Fix axis delay	17
2.4.6. Axis sensitivity reduce	17
2.4.7. Controller restart delay.....	18
2.4.8. View loaded profile name.....	18
2.4.9. Virtual keyboard.....	19
2.4.10. Virtual keyboard modifiers setting	19
2.4.11. Virtual mouse.....	20
2.4.12. Communication ports.....	21

2.5.	Indication setting	21
2.5.1.	Overview.....	21
	Standard LEDs	21
	Additional LEDs	21
	LED parameters	24
2.5.2.	Indication settings	25

Chapter3.

Axes setup **27**

3.1.	Overview.....	27
3.2.	Physical axis parameters	27
3.2.1.	Parameter description	27
3.2.2.	Axis response filtering	29
	Static filtration	29
	Dynamic filtration.....	29
3.2.3.	Trimming modes	30
3.3.	Logical axes	30
3.4.	Relative axes	31
3.4.1.	Overview.....	31
3.4.2.	Relative axis parameters.....	32
3.5.	Axes combining	32
3.5.1.	Overview.....	32
3.5.2.	Combi modes	33
3.5.3.	Dir modes.....	33
3.5.4.	BrakeV item	34
3.6.	Responce curves	35
3.7.	Conversion axis rotation to button press sequence	36
3.7.1.	Common parameters	36
3.7.2.	MCG Pro folding trigger settings	37
3.8.	Axis calibration.....	37
3.8.1.	Autocalibration	37
	Common parameters	37
	MCG Pro folding trigger calibration	38
3.8.2.	Manual calibration	38

Overview	38
Joytester interface	38
Axis center correction	39
Axis response range correction	39
Chapter4.	
Physical buttons	41
4.1. Overview	41
4.2. Physical button functions.....	41
4.2.1. Button mapping wizard dialog	42
Line (input control) choice.....	43
Output function choice.....	43
Free line choice	43
Logical (output) function choice	44
4.2.2. Line number check.....	45
4.3. Button customization.....	45
4.3.1. Button, simple button.....	45
Description.....	45
Restrictions:.....	46
4.3.2. Button with fixation	47
Description.....	47
Restrictions:.....	47
4.3.3. Button controlled by subshifts 1...6.....	47
Description.....	47
4.3.4. Button controlled by subshift # 7	47
Description.....	48
4.3.5. SHIFT1 / SHIFT2 / SHIFT0 modifiers	49
Description.....	49
Parameters.....	49
4.3.6. SubSHIFT modifier.....	50
Description.....	50
4.3.7. Toggle switch.....	51
Description.....	51
Three-position (On-Off-On) Toggle switch features.....	52
Physical button as toggle switch	54

Restrictions	54
4.3.8. Encoder	54
Description	54
Discrete encoder	55
Analog trimmer.....	56
Restrictions	57
4.3.9. Hat	58
Description	58
Restrictions	58
4.3.10. Pulse generator	59
Description	59
G1.....	59
G8.....	60
GT.....	60
GT+.....	60
GTE.....	61
GTE+.....	61
Differences between GT and GTE	61
GTR	61
GTR2	61
4.3.11. Two stage button (Tempo).....	61
Description	62
4.3.12. Axes fixation.....	62
Description	62
FA0.....	62
FA1.....	63
FA2.....	63
FA3.....	63
DR	63
4.3.13. Auxiliary axis	64
Description	64
SWAP	65
REMAP	65
SWITCH	66
PAI OFF.....	66

4.3.14. Cyclic switch	66
Description.	66
4.3.15. Trimmer	67
Description.	67
Trimmer Reset, Trimmer Return	68
Trimmer+, Trimmer-, Trimmer Auto+, Trimmer Auto-.	69
Trimmer SET+, Trimmer SET-	70
Global parameters	70
4.3.16. Dynamic equalizer	70
Description.	71
4.3.17. Toggle synchronizer	71
Description.	71
4.3.18. Button replica.	72
Description.	72
4.3.19. Disable line	73
Description.	73
4.3.20. No function	73
Description.	73
4.3.21. Boolean functions	74
Description.	74
CMP	75
JMP	76
4.3.22. Selector, radio button.	78
Description.	78
4.3.23. Relative axes control	79
Description.	79
4.3.24. Microstick mode switch.	80
Description.	80

Chapter5.

Logical button functions

5.1. Overview	82
5.2. Logical function setup modes	82
5.2.1. Access from Physical layer tab	82
5.2.2. Access from Logical layer tab	84

5.2.3. Function selection	84
5.3. Virtual buttons	85
5.3.1. Overview	85
5.3.2. Free line choice	85
5.3.3. Simultaneously button activation	86
5.4. Keyboard mapping	86
5.4.1. Overview	86
5.4.2. Keystroke assignment	87
5.4.3. Keyboard modifiers	87
5.4.4. Mapping completion	87
5.5. Mouse control	87
5.5.1. Overview	87
5.5.2. Mouse buttons	87
5.5.3. Mouse axes control	88
5.6. Macro	88
5.6.1. Overview	88
5.6.2. Macro assignment	89
5.7. Sound control	89
5.7.1. Overview	89
5.7.2. Function setup	89
5.8. Multimedia control	90
5.8.1. Overview	90
5.8.2. Function setup	90
5.9. Application launch	90
5.9.1. Overview	90
5.9.2. Function setup	90
5.10. System function control	91
5.10.1. Overview	91
5.10.2. Function setup	91
5.11. Button deactivation	91

Chapter6.

HAT/POV parameters	92
6.1. Overview	92
6.2. Microstick modes	92
6.3. Output mode	92
6.3.1. POV	93
6.3.2. Virtual/Logical buttons.....	93
6.3.3. Numpad	93
6.4. Microstick axes binding	94

Chapter7.

Group button assignments	95
7.1. Button reset	95
7.2. Reset specified button range	95
7.3. Using clipboard	95
7.3.1. Cut	96
7.3.2. Paste	96
7.3.3. Copy and paste	96
7.4. Button functions report	96
7.5. Group operations finish	96

Chapter8.

Macro setup	97
8.1. Overview	97
8.2. Macro parameters	97
8.2.1. Overview	97
8.2.2. Point parameters	97
8.3. Macro timing	98
8.4. Operations with macro.....	99
8.5. Group operations	99
8.6. Point group clearing.....	99
8.7. Filling point array	100

8.8. Using clipboard	100
----------------------------	-----

Chapter9.

Service functions	101
--------------------------------	------------

9.1. Loading parameters	101
9.1.1. Forced loading	101
9.1.2. Partial parameter loading	101
9.2. Current controller parameters	102
9.3. Saving profile	102
9.4. Loading profile	102
9.4.1. Load button using.....	102
9.4.2. Drag-n-drop using	102
9.5. Profile switch on-the-fly.....	102
9.5.1. Overview.....	102
9.5.2. Saving profile into the clipboard.....	103
Preparing zconfig.ini	103
Preparing zswitch.ini	103
Saving profiles into the clipboard.....	103
Loading profile from the clipboard.....	104
Switching profiles without configuration utility	104
9.6. Button assignments report.....	105

Chapter10.

Testing controls	107
-------------------------------	------------

10.1. Testing using configuration	107
10.1.1. Lines testing.....	107
10.1.2. Axes testing	107
10.1.3. BUS testing.....	108
10.1.4. MARS and LEDs testing	108
MARS testing	109
LEDs testing	109

AppendixI.

Zconfig.ini file description.....	111
--	------------

Chapter 1. Overview

VKB Njoy32 device configuration tool is intended to make the following actions:

- ▼ setup joystick controls,
- ▼ joystick axes calibration,
- ▼ save and load joystick parameters,
- ▼ preparing controller to firmware upgrade.

VKB Njoy32 device configuration tool (configurator) is saved in *VKBDevCfg-C.exe* file. It does not need to be installed. To launch configurator you must just execute this file. Up-to-date configurator versions you can find at VKB site <http://forum.vkb-sim.pro> in Download page. This page contains actual versions of firmware, profiles and firmware upgrade tool saved in *Z-Bootloader.exe* file.

1.1. Hardware and software requirements

Configurator works with the following VKB devices:

- ▼ Gladiator series,
- ▼ Mamba series,
- ▼ KingCobra series,
- ▼ pedals with TinyBox,
- ▼ ThrottleBox,
- ▼ BlackBox with any grips,
- ▼ Cobra-Z (Defender Cobra M5 USB Mk2 with Njoy32 controller).

Configurator works under Windows XP, Windows 7.

1.2. What's new

1.2.1. V.2.7

- ▼ Relative axes description (see 3.4 on p. 31).
- ▼ Radiobutton button function (see 4.3.22 on p. 78).
- ▼ RelAxes — relative axis mode control button function (see 4.3.23 on p. 79).
- ▼ Microstick mode switch button function (see 4.3.24 on p. 80).
- ▼ Boolean — Boolean functions for buttons (see 4.3.21 on p. 74).
- ▼ Analog POV (see Chapter 6 on p. 92).
- ▼ New Axis to buttons subfunction.
- ▼ GTR/GTR2 pulse generators.
- ▼ Trimmer return (see “Trimmer Reset, Trimmer Return” on page 68)

1.2.2. V.2.8

- ▼ RT-trigger in Boolean functions.

1.2.3. V. 2.9

- ▼ MCG Pro folding trigger setup (see 3.7.2 on p. 37).
- ▼ New event for indication — Mouse active (see 2.4.11 on p. 20).
- ▼ MCG Pro folding trigger calibration (see MCG Pro folding trigger calibration on p. 38).

1.2.4. V.2.10

- ▼ Smooth trimmer reset (see Trimmer Reset, Trimmer Return on p. 68).
- ▼ Using clipboard for physical lines setting (see Line (input control) choice on p. 43).
- ▼ Two virtual buttons switch on diagonal HAT pressing (see 6.3.2 on p. 93).
- ▼ CMP function, Comparator in Boolean functions (see CMP on p. 75).
- ▼ JMP function, Jumper in Boolean functions (see JMP on p. 76).
- ▼ Using Drag-n-Drop for profile loading (see 9.4.2 on p. 102).

Chapter 2.Using configurator

2.1. Interface

After you launch **VKBDevCfg-C.exe** the main **VKBDeviceConfig** window will appear. The title bar contains configurator version (Fig. 2.1).

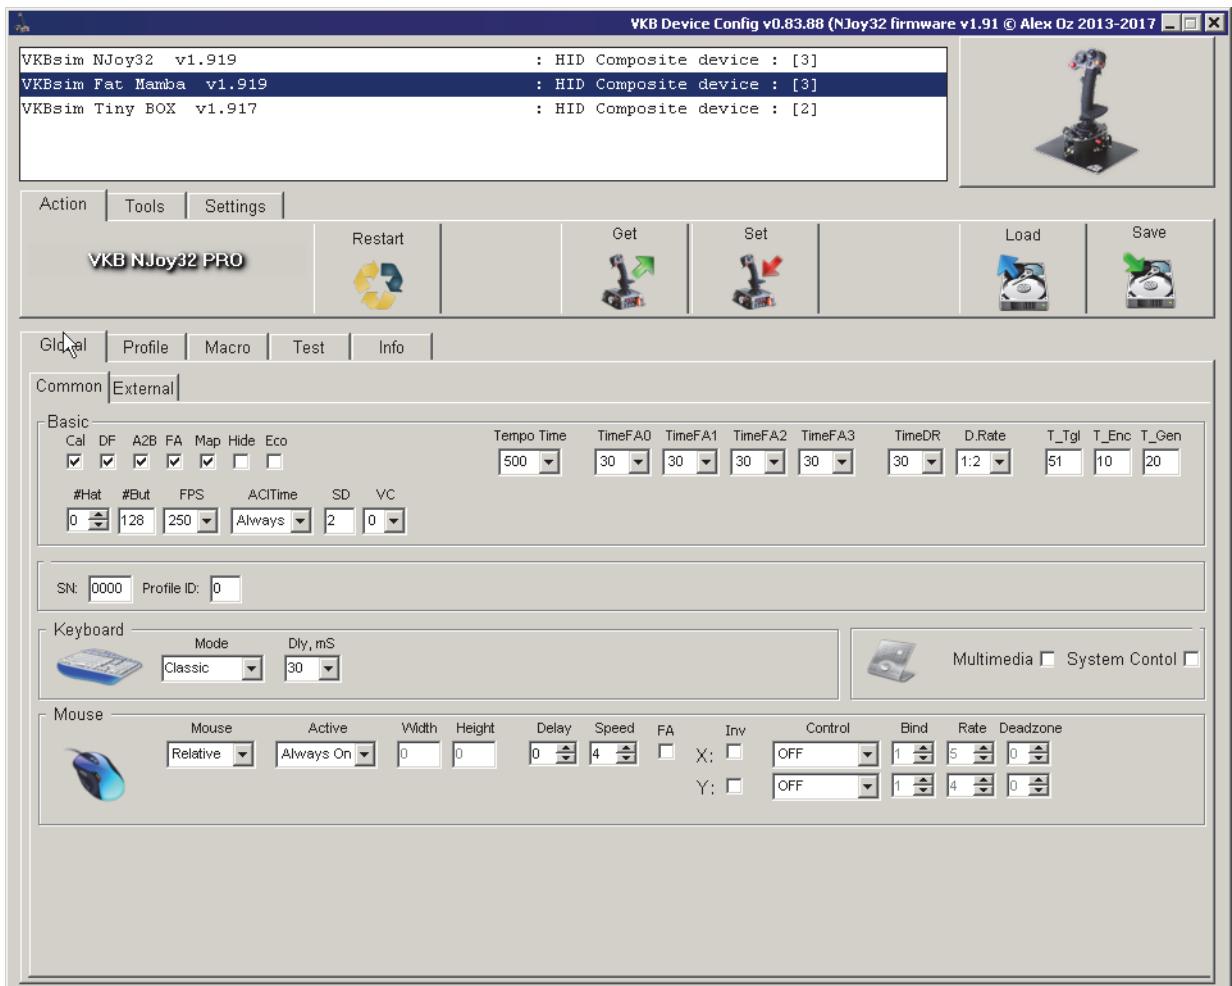


Fig. 2.1.

Connected VKB devices are listed in this window. To setup certain device you must select it in the list.

2.1.1. Device info

Info tab contains the following device data:

- ▼ product name,
- ▼ firmware version,
- ▼ device mode (pro/light),
- ▼ T-Link support ready (for pedals controller).

You can see an example of **Info** tab content on Fig. 2.2.

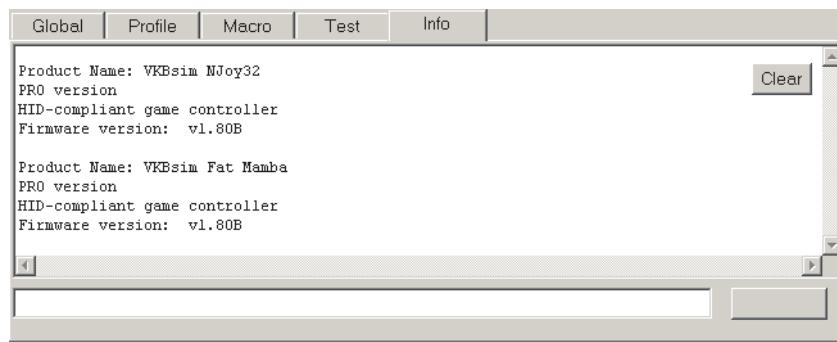


Fig. 2.2.

2.2. Firmware upgrade

2.2.1. Software activation

Use firmware updating utility saved in *ZBootloader.exe* file. Execute the following actions to upgrade firmware.

1. Connect controller to the PC.
2. Run *VKBDevCfg-C.exe*, select joystick name in the list (fig. 2.1 on p. 13).
3. Press **Bootloader** button on **Tools** tab.

You will see firmware upgrade utility window (fig. 2.3)

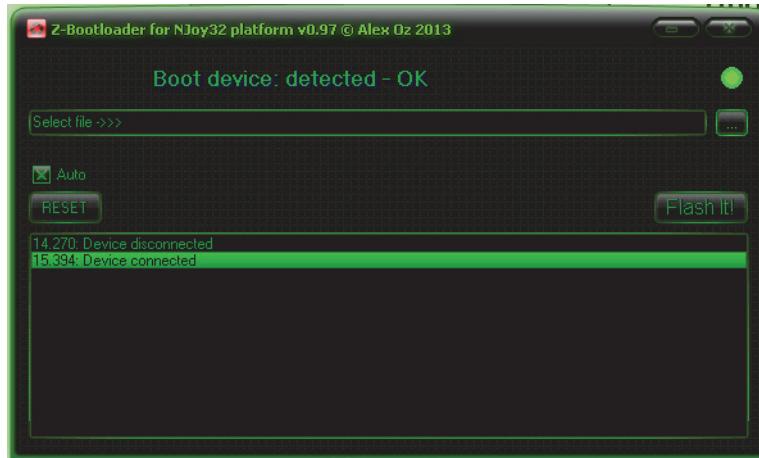


Fig. 2.3.



When *ZBootloader-C* runs, configurator window will be closed automatically. If it still runs for any reason, close it manually. Configurator and *ZBootloader-C* must NOT run simultaneously!

4. Press **Browse** button and select firmware file in standard Windows dialog.
You will see its name in dialog.
5. Press **Flash It!** button.

Some information messages will appear in utility window. After successful upgrade completion z-bootloader window will be closed automatically. Launch *VKBDevCfg-C.exe*. You will see device name with new firmware version number.



Some versions of firmware reset controller parameters to default values. If you have made custom settings of controller parameters save your profile to file. After firmware upgrade you can load your custom profile (see Chapter 9 on p. 101).

2.2.2. Hardware activation

In some circumstances software activation could not start as described above. For example operation system did not recognize joystick. In this case you even will not see joystick name in the list of connected devices. To activate controller execute the following actions.

1. Disconnect joystick from the PC.
2. Run ZBootloader.exe. You will see that device is turned out (Fig. 2.4).

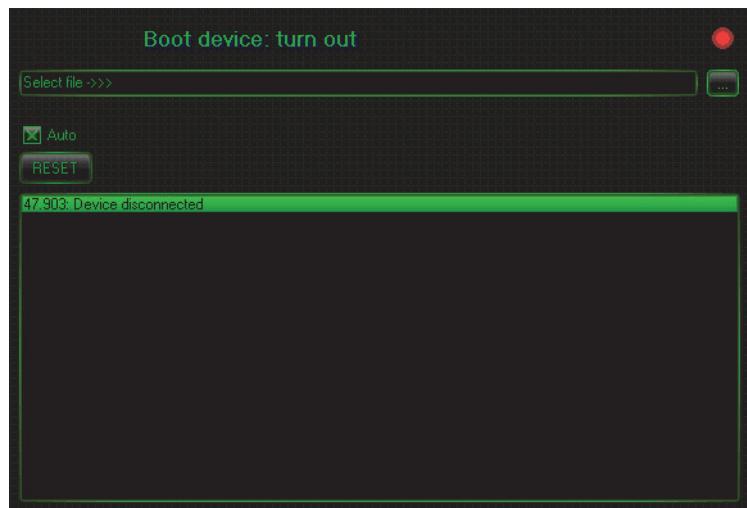


Fig. 2.4.

3. Short BOOT jumper on the controller plate (Fig. 2.5).

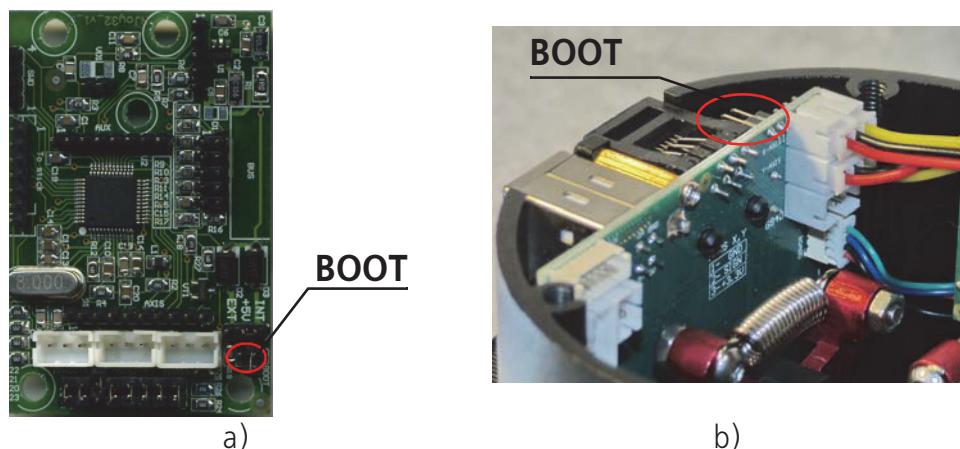


Fig. 2.5.



You can see BOOT jumper of Njoy32 1.1 (a) and VKB Mamba (b) controllers. Look for BOOT label on other controller PCBs.

4. While BOOT jumper is shorten, connect joystick to the PC and then release jumper.
5. You will see that device is connected (Fig. 2.3 on p. 14). Further actions are the same as described in sect. 2.2.1 on p. 14.

2.3. Common parameters

2.3.1. Global variables

Open **Global — Common** tab to set global controller parameters. Table 2.1 on p. 16 contains control item descriptions.

Table. 2.1. Global controller parameters

Control name	Description
Checkboxes	
Cal	Calibrate status. Device axes calibration status. Checks automatically after calibration completion (see 3.8 on p. 37).
DF	Dinamic Filter. Switches dynamic axes response filter. You can assign filtration rate for each axis separately see 3.2 on p. 27.
A2B	Axes to Buttons. Enables axis response to button keystroke sequence conversion (see 3.7 on p. 36).
FA	Fix Axes. Allows to fix axis state (see 4.3.12 on p. 62).
Map	Logical button mapping. Allows physical button mapping to logical ones or keyboard.
Hide	Hides current device.
Eco	Allows to control virtual keyboard connection time.
Tempo Time	Tempo function delay time (see 4.3.11 on p. 61).
Fields	
T_Tgl	Time of toggle pulse. Toggle pulse width (see 4.3.7 on p. 51), milliseconds.
T_Enc	Time of encoder pulse. Encoder pulse width, milliseconds.
T_Gen	Time of generator pulse. Generator pulse width, milliseconds.
Trimmer Time	Trimmer reset duration, ms (see Trimmer Reset, Trimmer Return on p. 68).



It is recommended to set **T_Enc** value between 10 and 50 ms. If you use internal button mapper, set 10 - 20 ms. For external mappers use value not less than 20 ms.

2.4. Additional parameters

2.4.1. Control item number

#**Hat** field allows to set Hat switch number. Maximum number is equal to 4.



If you do not use Hat view control, for example you use Natural Point Trackir, you can set this parameter equal to 0 and use Hat switch as four buttons.

#**But** field allows to set maximum button number. Maximum number is equal to 128. Do not forget about Windows DirectInput restrictions. You can see 32 buttons only using Windows applet. To see buttons above 32 use VKBjoytester tool.

2.4.2. Sampling rate

FPS combo box allows to choose controller polling sampling rate by USB (Gz).

2.4.3. Automatic calibration time

ACITime allows to set time of automatic joystick calibration. It is executed on every device connection. Automatic calibration measures extreme response values and fixes center position. Its result depends of initial axis position. Automatic calibration will be executed permanently if you choose **Always**. For other values it will be executed for chosen period only.

2.4.4. Tempo Time

Tempo function delay time, ms (see 4.3.11 on p. 61).

2.4.5. Fix axis delay

Time FA0, **Time FA1**, **Time FA2**, **Time FA3** combo boxes allow to set delay time (milliseconds) before axis fixation will be applied (see 4.3.12 on p. 62).

2.4.6. Axis sensitivity reduce

Sometimes this is reasonable to reduce axis sensitivity. For example when you try to aim the enemy. **D.Rate** combo box allows to set reduce factor.

Set delay time (milliseconds) before sensitivity will be changed using **TimeDR** combo box. You must assign joystick button to control this function (see 4.3.12 on p. 62).

2.4.7. Controller restart delay

Every time you have changed controller parameters you must save new settings in its memory. On some computers sequential parameter saving causes error. You will see error message (Fig. 2.6).



Fig. 2.6.

This error is a result of specific interaction between Windows and USB devices. If you have such troubles try to set nonzero value in **SD** (Delay of Start Controller) field (Fig. 2.7).



Fig. 2.7.

2.4.8. View loaded profile name

You can use specific profiles for different programs. Those profile names can be indicated in configurator window. Create data set for this purpose. An example you can see in table 2.2.

Table. 2.2. Profile parameters

ID	Description	File name
1	Fat Mamba profile for BoS	Mamba_1556_BoS.cfg
2	Fat Mamba profile for CloD	Mamba_1556_BoB.cfg
3	Fat Mamba profile for “old” II-2	Mamba_1556_II-2.cfg

All parameters in this example are optional. Add the following lines to **[User]** section of *Zconfig.ini* configuration file (saved in the same folder with *VKBDevConfig.exe*):

[User]

Profile 1= Fat Mamba profile for BoS

Profile 2= Fat Mamba profile for CloD

Profile 3= Fat Mamba profile for “old” II-2

To see profile name enter its ID into **Profile ID** field (Fig. 2.9).

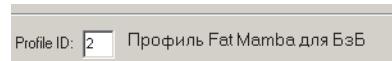


Fig. 2.9.



Appendix I. on p. 111 contains detailed description of *Zconfig.ini* file.

2.4.9. Virtual keyboard

You can map joystick buttons to keystrokes, use buttons to control system functions or multimedia applications. Control items of **Keyboard** group allow you to control those functions.



Do not forget to check **MAP** to allow keyboard mapping.

Mode combo box options allow to choose virtual keyboard mode.

- ▼ **Off** — virtual keyboard disabled,
- ▼ **Classic** — standard keyboard; simultaneously pressed virtual keys allowed.
- ▼ **Modified** — simultaneously pressed virtual keys disabled; if you press some keys only the last pressed one will work. No combinations like <Ctrl+Z> are accessible.



If **Map** checked and any virtual keyboard mode chosen new virtual device *HID Keyboard Device* will appear in device list.



An example of **Standard** mode use ClasterFire triggers of Mamba family joysticks. If first trigger fires gun and the second cannon, than when you press both triggers you will fire all weapons. With **Modified** mode cannon only.

2.4.10. Virtual keyboard modifiers setting

The Battle of Stalingrad simulator series use nonstandard processing of keyboard modifiers such as Shift, Ctrl etc. if they are mapped to joystick buttons. For example if you have mapped *Ctrl+A* combination to button, simulator randomly will process it right, i.e. *Ctrl+A*, or pure *A*. **Dly** parameter (milliseconds), resolves this issue. Value of 30 ms is recommended. Larger value can cause errors if you will press button with short intervals.

Multimedia checkbox allows joystick buttons to control multimedia applications (see 5.8 on p. 90).

System checkbox allows joystick buttons to control system functions of operating system (see 5.10 on p. 91).

2.4.11. Virtual mouse

Joystick buttons and axes can be used to control virtual mouse. Use control items of **Mouse** group to set up virtual mouse.

Choose mouse type from **Mouse** combo box.

- ▼ **Off** — no virtual mouse.
- ▼ **Relative** — mouse cursor moves relatively to current cursor position.
- ▼ **Absolute** — mouse cursor moves from the center of the screen. It jumps to this point when you begin to move joystick axes or press buttons assigned to control mouse axes.

 You can move cursor to the screen center forced pressing button with assigned **Set Center Point** function (see 5.5.2 on p. 87).

Virtual mouse switch mode depends on **Active** combo box items.

- ▼ **On/Off** — To switch mouse on you must press assigned button (see 5.5.2 on p. 87).
- ▼ **Always On** — Virtual mouse is turned on permanently.

 Be careful using virtual mouse always turned on. Wrong controller settings or even small axis jitter that is invisible while ordinary joystick use will cause spontaneous mouse cursor move. It may be very difficult to neutralize this move with physical mouse.

If virtual mouse is activated, corresponding event is generated, that can be used for LED indication (see 2.5 on p. 21).

Set **Width** and **Height** values (pixels) for **Absolute** mode.

If you use buttons for axes control, choose automatic cursor acceleration delay value from **Delay** combo box. Acceleration rate set using field with counter **Speed**. If you assign velocity rate for control button then cursor velocity will be constant, without acceleration.

If you use physical joystick axes to control virtual mouse ones, you can control physical axes state. If **Fix** is checked then joystick axes control mouse only. Otherwise physical axes will control mouse and joystick axes simultaneously.

Checkbox **Inv** allows to control mouse axis reverse.

Choose mouse axes control mode from **Control** combo box.

- ▼ **Off** — joystick buttons control mouse axes,
- ▼ **Ph.Axis #** — joystick axes control mouse axes.

Choose joystick axis number that will be used to control mouse axis from **Bind** counter.

Rate counter allows to associate cursor move velocity with axis position. If counter value is equal to 1, than velocity is constant and not depends on axis offset. If this value is greater than 1 cursor velocity will be proportional to axis deviation.

Deazone counter allows to set deadzone size. If deadzone has zero value than even small axis jitter will cause mouse cursor to move. Deadzone value equal to 7 sets deadzone size equal to a half of full axis response, 6 — to a quarter and so on.

2.4.12. Communication ports

Controller has serial communication ports used for connection with external devices. Control items of **External** tab allow to set port modes.

SPI1 port mode combo box items allow to choose first port modes:

- ▼ **OFF** — not used,
- ▼ **S-but** — standard button registers connected.

Set register number in **RegN** field. For Mamba/Cobra joysticks two registers are used by grip buttons and connected to physical *To Stick* connector. NJoy32 1.1 has two connectors X10 and X11 for connection external devices. You can read how to make Fat King Cobra joystick from King Cobra MKII using extended button/axis panels installation in document *Модернизация джойстика King Cobra MKII Pro Руководство пользователя*.

SPI2 port mode combo box items allow to choose second port modes:

- ▼ **OFF** — not used,
- ▼ **S-but** — standard button registers connected.
- ▼ **WS2812** — RGB LEDs connected.

2.5. Indication setting

2.5.1. Overview

Standard LEDs

LEDs can be used to indicate joystick state. For example Mamba series joystick case has six LEDs, Gladiator has two LEDs.

Additional LEDs

You can use additional RGB LEDs WS2812 (<https://www.drive2.ru/b/1646666/>) for joystick buttons and axis state indication. Leds are sellled as bands and differ in LED number per one meter, 30 (Fig. 2.10), 60 or 144.



Fig. 2.10.

Other variant – panels with 8 LEDs (Fig. 2.11).



Fig. 2.11.

Use BUS connector to connect LEDs to controller. Fig. 2.12 shows NJoy32 single-plate controller connector.

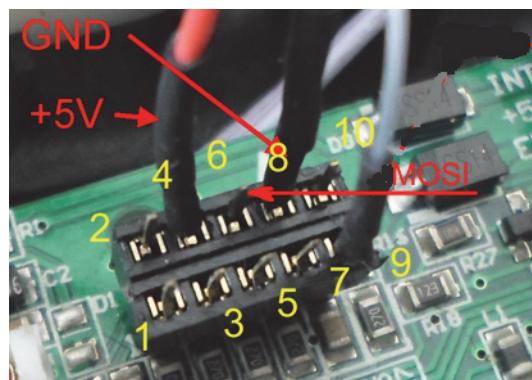


Fig. 2.12.

The following lines are used for LED connection:

- ▼ 4 - VCC +5B,
- ▼ 6 - MOSI,
- ▼ 8 - ground.

LED band contacts have corresponding designations. NJOY32 can control up to 80 LEDs with external power supply. It is not recommended to connect more than 5 LEDs without power supply. LED band has 3 signal contacts and 2 for external power connection, for example cell phone charger. LEDs connection without external power is shown on Fig. 2.13.



Fig. 2.13.

LEDs connection with external power is shown on Fig. 2.14.

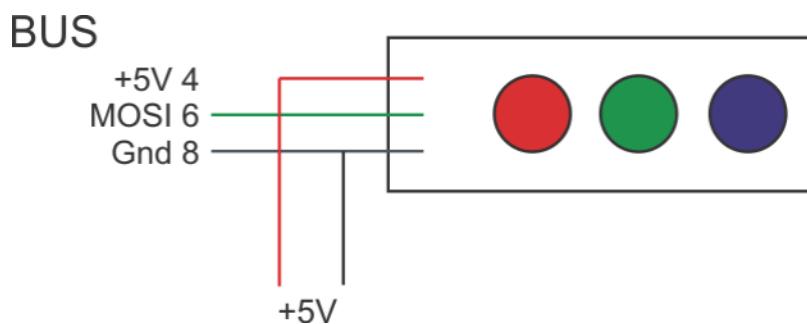


Fig. 2.14.



+5 V from power supply connect to LEDs only! Do not connect it to controller+5 V line.

Choose **WS2812** item from #2 combo box to enable and control LEDs. Set count of additional LEDs using counter. Numbers of these LEDs begin from 8. An example of LED settings is shown on Fig. 2.15. The first additional LED with number 8 (the closest to controller on LED band) will flash ultra fast using two colors, green and light violet when SHIFT button is pressed.

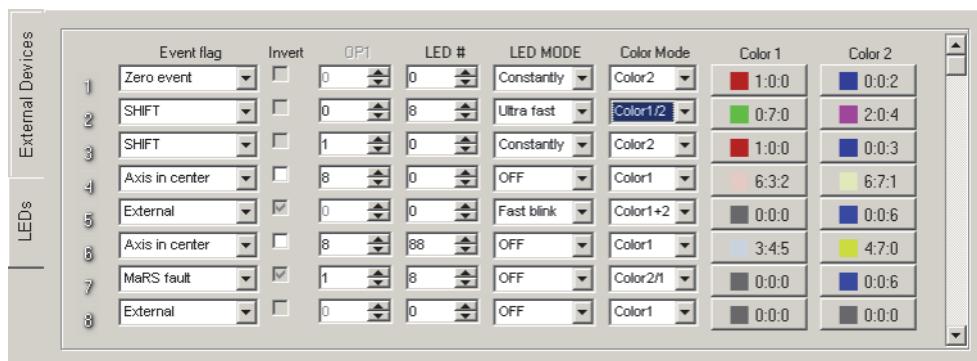


Fig. 2.15.

LED parameters

The following parameters are used to control LED light:

- ▼ color,
- ▼ frequency,
- ▼ brightness.

To set up indication open **Global — External — LEDs** tab.

Names of indicated controller states and corresponding **Event flag** combo box items are shown in table. 2.3.

Table. 2.3.

Event flag item	Controller state	Note
External	No indication.	
Zero event	Default controller state.	No button pressed, axes in zero or center.
SHIFT	Shift button pressed.	
SubSHIFT	SubShift button pressed.	
Fix Axis	FA (Fix Axes) button pressed.	
Calibration	Calibration is executed.	
Physical Button	Physical button pressed.	Indication can be inverted so LED will flash when button is not pressed but go out when button is pressed.
Virtual Button	Virtual button activated.	
Logical Button	Logical button activated.	
Axis in center	Axis is in center or in zero position.	Can be inverted.
MaRS fault	MaRS sensor failure.	Set testing MaRS number in OP1 field.
Calibration fault	Calibration failure.	
Rudder connect	Pedals are connected to controller.	If controller has Pedals port.
BUS error	External device connection to BUS port failure.	

Table. 2.3.

Event flag item	Controller state	Note
POV active	uStick is used as POV.	See Chapter 6 on p. 92.
Mice active	Virtual mouse is active	See 2.4.11 on p. 20.

2.5.2. Indication settings

Open **Global — External — LEDs** tab (Fig. 2.16).

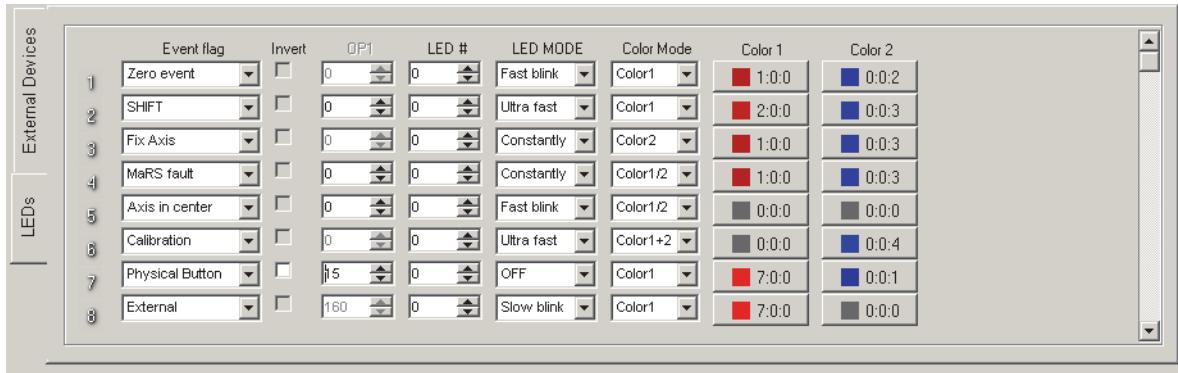


Fig. 2.16.

Choose desired event that you want to indicate from **Event flag** combo box. Set additional parameter in **OP1** field (needed for some events, see table 2.4).

Table. 2.4.

Event flag	Parameter
SHIFT	0 — Shift 1; 1 — Shift 2; 2 — Shift 0.
SubSHIFT	SubShift number.
MaRS fault	Testing MaRS number, 1...8.
Axis in center	Axis number, 1...8.
Physical Button, Virtual Button, Logical Button.	Button line number.

Set LED number for this event in **LED#** field. Single system LED has number 0. You can assign the same LED to indicate different events. In this case use different light parameters i.e. color, brightness, frequency. If some events assigned to single LED will occur simultaneously will be indicated event with greater number.

Choose the following LED light mode from **LED Mode** combo box:

- ▼ **Off** — LED is off,

- ▼ **Constantly** — constant light,
- ▼ **Slow Blink** — slow blink,
- ▼ **Fast Blink** — fast blink,
- ▼ **UltraFast** — ultra fast blink.

■ 1:0:0 | Press **Color 1** button to set corresponding color parameters. You will see setup dialog (Fig. 2.17).



Fig. 2.17.

Using counters set up RGB components brightness. To complete setup close dialog. Set up the second color in the same manner.

Use **Invert** checkbox to invert event. By default it is unchecked. For example if you have assigned LED to indicate axis central position than it will flash when axis is in its center. If you check **Invert**, than LED will not flash when this axis is in center. It can be useful in some cases. For example axis #8 is used to trim Axis #2 (roll). **Invert** is checked. Corresponding LED will flash only if roll axis is trimmed.



Using encoders, configured as virtual axis (see Analog trimmer on p. 56), for trimming is a very good idea. To reset trimmer you must press single button resetting it (Trimmer Reset function). For any physical axis you would turn knob and search for the center manually.

Chapter 3.Axes setup

3.1. Overview

Maximum axes number that controller can process is eight. The following rotation sensors can be used:

- ▼ digital D_MaRS sensor,
- ▼ A_MaRS sensor (Gladiator family, 4-wired),
- ▼ V_MaRS (virtual, Gladiator yaw axis),
- ▼ analog sensors, potentiometers,
- ▼ encoders,
- ▼ buttons.

Encoders and buttons are used for virtual axes.

Open **Profile – Common -n-Axes** tab (Fig. 3.1) to configure axes.

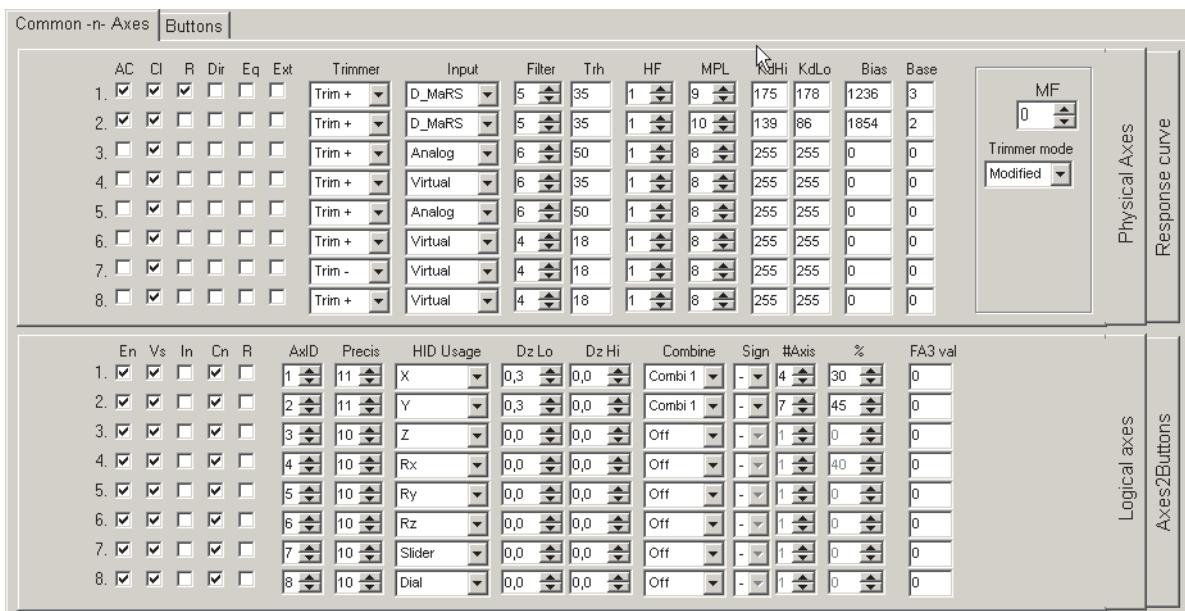


Fig. 3.1.

Every axis has a set of parameters, physical, logical etc.

3.2. Physical axis parameters

3.2.1. Parameter description

Physical Axes tab (Fig. 3.1) contains control items to configure physical parameters. See their description in Table 3.1.

Table. 3.1. Physical axis parameters

Control item	Parameter description
ACn	AutoCentering. Axis center is detected automatically with every controller start.
ACl	AutoCalibration. Axis is calibrated automatically with every controller start. Must be checked to allow user to calibrate it (see 3.8 on p. 37).
R	Physical data inversion. Physical axis rotation reverse.
Dir	Direction. Controls normal MaRS rotation direction. Is used to calibrate axis without center with angle range less than <175°.
Eq	Equalizer, Response curve. Enables response curve adjustment (see 3.6 on p. 35).
Ext	Axis to external device. Axis response can be transferred to external device. For example to use Joystick1 Rx axis to trim Joystick 2 X axis, check Ext for it (Rx).
Trimmer	Trimmer enable. Axis can be trimmed. Variants Trim+ и Trim- specify trim direction.
Input	Type of input. Axis sensor type: <ul style="list-style-type: none"> ▼ D_MaRS — Digital MaRS, ▼ Analog — potentiometer, ▼ Virtual — virtual axis, ▼ A_MaRS (Gladiator MaRS type), ▼ V_MaRS (Gladiator family yaw sensor). Wrong sensor type will cause axis malfunction!
Filter	Filter grade. Sensor filtering level for dynamic filtration. Default value for D_MaRS is equal to 5, for analog sensors – 6. If filter value = 0 than Manual filtering is used instead of dynamic.
Trhs	Threshold of dynamic filter. Dynamic filter operation threshold. DF checkbox enables dynamic filter (see 2.3 on p. 16). You can set threshold level value in range from 0 to 255. Default value for D_MaRS is equal to 33, for analog sensors — 55. If Trh>0 than MF field value is used as upper dynamic filter value.

Table. 3.1. Physical axis parameters

Control item	Parameter description
HF	H-Filter. Filter is named by Hruks (newView author), dynamically moving filter. Additional filtration for tremor compensation. It is advisable to use for analog axes especially with «noisy» potentiometer.
MPL	Multiplier. Binary multiplier for sensor response normalization. Value range is -15...+15. Default value for D_MaRS is 9, for analog sensors — 8.
KdHi	Coefficient of gain high. Factor specifying (together with MPL) upper level of axis response. Value range is 0...255. Default value for D_MaRS is 190, for analog sensors — 255.
KdLo	Coefficient of gain low. Factor specifying (together with MPL) lower level of axis response. Value range is 0...255. Default value for D_MaRS is 190, for analog sensors — 255.
Bias	Bias zero point. Specifies sensor initial position for automatic calibration at the controller start. Is used for manual calibration.
Base	Base quadrant. D_MaRS sensor base quadrant for automatic calibration at the controller start. Reference parameter.

3.2.2. Axis response filtering

High sensitivity of sensors and gimbal precision make significant hand tremor. Response filtering allows to compensate this noise. Static or dynamic filtering can be used.

Static filtration

Uncheck **DF** to use static filtration (see 2.3 on p. 16). Use **MF** field with counter to set filtering factor. Filtering factor for static filtering is constant in all gimbal moving range.

Dynamic filtration

Check **DF** to use dynamic filtration. Filtering factor for dynamic filtration depends of gimbal deviation. Upper factor value (filter threshold) is equal **Trh** field value.

By default it is equal to 18 for 8000 counts of one way sensor response value or ~0,2% of gimbal rotation. This means that for small deviations less than 0,2% of maximum angle filtering is maximal. If deviation exceeds specified value filtration rate very rapidly falls to minimal value. If difference between sensor response counts is less than **Trh** field value, filtration factor value will gradually grow to specified value.

Set **Trhs** field value equal to 0 for specific axis to disable dynamic filtering for it. Static filtering will be used instead.

-  The more filtration grade you set, the more inert will be axis response. If you want maximal sharp response set **DFT=0, Filter=1**.

3.2.3. Trimming modes

Choose trimming mode from **Trimmer mode** combo box.

- ▼ **Standard:** trimmed axis center will be shifted, the whole range unchanged, i.e. when you move grip to one extreme position axis response will not reach its maximal value. When you move the grip to another side response value will reach maximal value while grip is not at the end of range.
- ▼ **Modified:** trimmed axis center will be shifted. Both parts of axis response range will be changed so extreme position of grip will correspond to extreme axis response.

3.3. Logical axes

Use control items of **Logical Axes** tab (Fig. 3.1 on p. 27), to configure logical axes parameters. See parameters description in Table 3.2.

Table. 3.2. Logical axis parameters

Name	Description
En	Enabled, on/off axis. Enables axis. Axis parameters are calculated even if it is invisible (Vs unchecked). This mode you can use to convert axis rotation to button press sequence without axis response.
Vs	Visible in HID. Makes enabled axis visible. Thus to use any axis you must set it as enable and visible!
In	Logical inversion of axis. Inverts axis rotation. Instead of physical inversion (see 3.2.1 on p. 27, R checkbox), that is applied to axis response at the beginning of output signal processing logical inversion is applied at the end. In most cases the result will be the same but sometimes inversion mode can be significant.
Cn	Axis with center. Locates lower deadzone position – in the middle of axis range for axis with center (checked) or by extreme positions (unchecked). MUST be checked for analog sensors.
R	Physical data inversion. Inverts physical layer axis response.
AxisID	ID of binded physical axis. Binds logical axes to physical ones. Single physical axis can be binded to several logical axes.

Table. 3.2. Logical axis parameters

Name	Description
Mode	Absolute/Relative mode of axes input. Axis mode, absolute or relative (see 3.4 on p. 31).
RMpl	Relative mode multiplier. Multiplier for relative axis.
TCurve	Relative mode response curve type. Response curve type for relative axis.
FL	Forced limit. «WEP limit switch».
Bnd	Bonding. Controls getting relative axis response into a loop.
Precis	Precision of axis. Axis response digital capacity, bits.
HID Usage	HID axis name. It is NOT recommended to change default names. Wrong name can cause axis malfunction.
Dz Lo	Deadzone in center or bottom of axis. Size of deadzone in the center of response range (axis with center) or by lower limit (axis without center).
Dz Hi	Deadzone in top of axis. Size of two deadzones by upper and lower limits of response range (axis with center) or by upper limit (axis without center).
Combine	Type of combine Axis. Combining axes type (see 3.5 on p. 32).
Sign	Sign of combine axis. Axes combining direction (see 3.5 on p. 32).
#Axis	Number of the axis that forces on current one.
%	Maximum combining effect.
FA3 val.	Fixed value for FA3 mode. Fixed axis response value on button with FA3 function (see 4.3.12 on p. 62).

3.4. Relative axes

3.4.1. Overview

Response of common **absolute** axes corresponds to grip position. Usually absolute axes are used to control plane (roll, pitch, yaw, brakes), engine (RPM, throttle, radiators) etc. It is reasonable to use **relative** axes for microsticks. The rules for relative axes response are:

- ▼ Grip move direction determines response direction.
- ▼ Grip deviation value determines response speed. The more deviation the more speed.

When you release grip it returns to the center automatically under the impact of springs, but response remains in the last point. You must use separate control unit (**RARst** button, see 4.3.23 on p. 79) to reset axis instantly or move grip to opposite side.

3.4.2. Relative axis parameters

Select **Rel** from combobox **Mode** on **Logical axes** tab. Select response multiplier from **Rmpl** combobox. **Lin** and **Sqr** variants of **Tcurve** combobox specify response curve type, linear or square-law. Use control units of **Response curve** tab (see 3.6 on p. 35) for fine tuning. If **FL** is checked, than when you move the grip to its limit response value instantly will be set to maximum. As opposed to absolute axis response of relative one does not depend of stick position directly. Even if you moved it to extreme position very fast, response will grow with constant speed. Checking **FL** you can maximize it instantly.

If **Bnd** is checked, axis will be «looped». For example, you have moved the grip to the right. Response cursor moves in the same direction and after it reaches limit, will not stop, but arrives from the other side (Fig. 3.2).

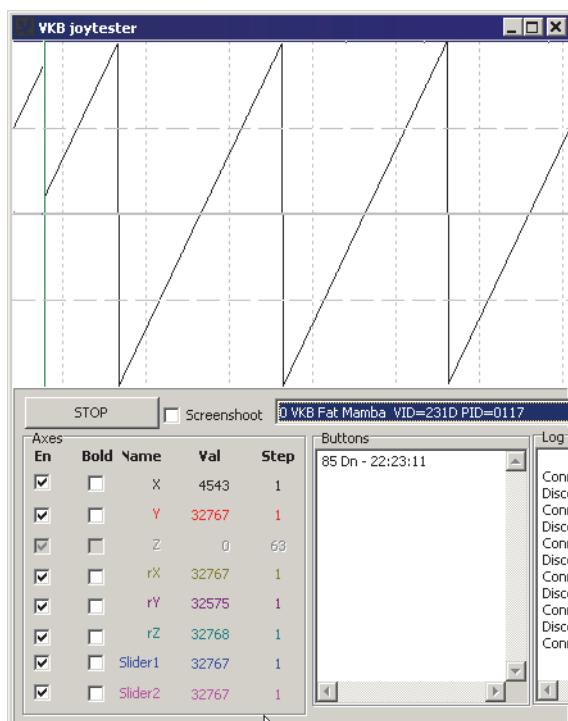


Fig. 3.2.

3.5. Axes combining

3.5.1. Overview

Axes combining allows to «rotate» one axis using another one. There is a difference between this kind of axis control and using button (see 4.3.15 on p. 67) or encoder

(see 4.3.8 on p. 54) as axis trimmer. Using buttons or encoders you must not create an axis to change response of existing one. When you combine axes you must have forcing axis, physical or virtual.



You can trim aircraft axes which can not be trimmed in reality. Cheat detected)))

3.5.2. Combi modes

Problem definition: how to trim axis #1 (roll) using axis #8?

To resolve this problem do the following actions.

1. Open **Profile — Common-n-Axes — Logical Axis** tab.
2. Choose **Combi1** item from **Combine** combo box for axis #1.
3. Enter number of forcing axis, 8 in this example, using **#Axis** counter.
4. Set maximum combining effect using **%** counter. This value determines trimmed axis center shift if forcing axis will be moved to its extreme position. 50% moves center to range limit. It is recommended to use 20-25%.
5. Set center shift direction choosing item + or - from **Sign** combobox (Fig. 3.3).



Fig. 3.3.



6. Press **Set** button to save settings to controller memory.
7. Check axes combining using VKBJoytester.

Fig. 3.4 shows axes #8 (pink) and #1 (black) response if axis #8 is rotated. Physically axis#1 is idle.

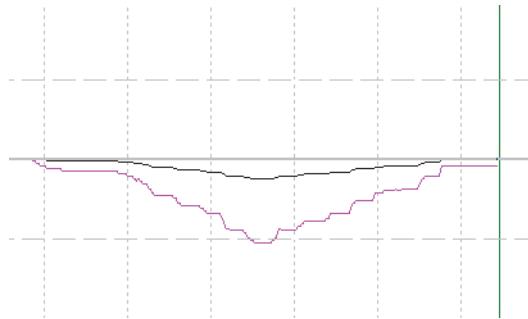


Fig. 3.4.

3.5.3. Dir modes

Dir1 and **Dir2** items of **Combine** combo box allow to align centers of two combined axes. Combined axes work is shown on Fig. 3.5.



Fig. 3.5.

Dir1 and **Dir2** items differ by response sign (shift direction). Fig. 3.6 a) and b) show response directions for **Dir1** and **Dir2** items. Physically both combined axes were rotated in the same directions.

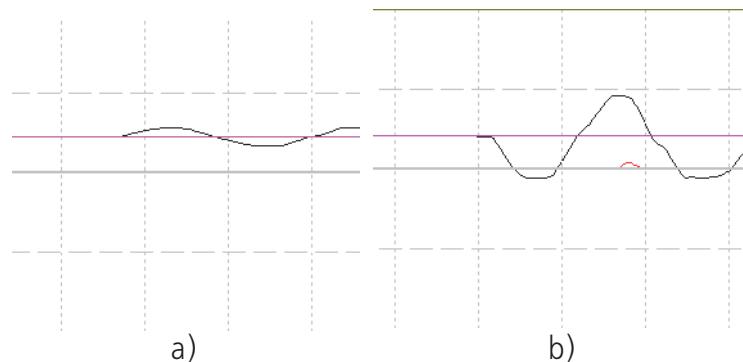


Fig. 3.6.

3.5.4. BrakeV item

This combining mode is used for toe brakes. Default mode for TinyBox controller is shown on Fig. 3.8.

	En	Vs	In	Cn	R	AxID	Precis	HID Usage	Dz Lo	Dz Hi	Combine	Sign	#Axis	%	FA3 val	
1.	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	1	11	X	3,0	5,0	Off	-	1	0	0	
2.	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	4	10	Y	0,0	0,0	BrakeV	-	1	8	0	
3.	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	4	10	Z	0,0	0,0	BrakeV	+	1	8	0	
4.	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	4	10	Rx	0,0	0,0	Off	-	1	0	0	
5.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	5	10	Ry	0,0	0,0	Off	-	1	0	0	
6.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	6	10	Rz	0,0	0,0	Off	-	1	0	0	
7.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	7	10	Slider	0,0	0,0	Off	-	1	0	0	
8.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	8	10	Dial	0,0	0,0	Off	-	1	0	0	

Fig. 3.8.

T-Rudder single axis is X, yaw. Virtual axis #4 is controlled by virtual button (use T-Link program to control this button). One of another joystick physical buttons is transferred to Tiny Box as virtual one. TrA+ function (see 4.3.15) is assigned to this button (Fig. 3.9).

Reg#14	B	B	B
Reg#15	B	B	B
Reg#16	TrA+ Axis #4 64x	Crv	Axes 1

Fig. 3.9.

Axes #2 and #3 have the same **AxID** as #4. So when you press button all three axes will response. Axis#4 is invisible (**Vs** is unchecked). Thus right and left brakes are realized (if you assign corresponding axes in simulator). Brake axes #2 are combined with axis #1 (physical yaw axis) using **BrakeV** mode and 8% of range. If button is pressed both brakes work simultaneously. If you move rudder pedal, and its response will exceed 8% corresponding brake will be released. Thus using single axis pedals you can control three axes.

3.6. Response curves

Use control items of **Response curve** tab to customize axes response curves (Fig. 3.10).

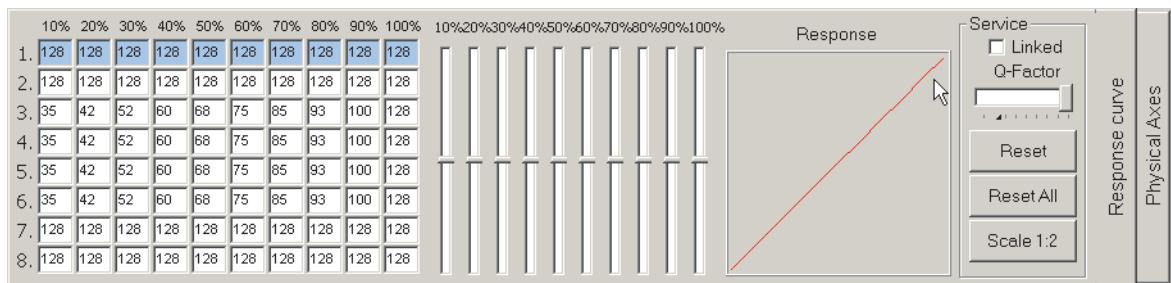


Fig. 3.10.

Make the following actions to customize axis response curve.

1. Select (click) desired axis.
2. Move sliders 10%, 20% etc. to shape curve.

Field values will correspond to slider positions. Check **Linked** to link sliders. **Q-Factor** slider sets linkage rate. Resulting smoothed curve is shown on **Response** panel. To permanently apply customized curve to an axis check **Eq** for it (see 3.2.1 on p. 27).

To apply curve temporary use button with **Crv** (**CrVa**) function (see 4.3.14 on p. 66).

Also you can use simplified axis response control with fixed reducing rate.

- ▼ Choose reducing rate from **D.Rate** combo box (see 2.4.6 on p. 17),
- ▼ Assign **DR** function to a button (see DR on p. 63).

When you will press this button (aiming, for example) axis response will be decreased.

3.7. Conversion axis rotation to button press sequence

3.7.1. Common parameters

You can convert any axis rotation to the sequence of button pressings. The whole axis response range is divided to some zones. Every zone will have corresponding button. While you move the grip axis response varies. When it comes to one of the zones, corresponding button will be virtually pressed. Control items of **Axes2Buttons** tab (Fig. 3.11) allow to configure axes-to-buttons conversion.



Fig. 3.11.

Choose axis response range division type from **Type** combo box.

- ▼ **OFF** — no conversion.
- ▼ **Edges1** — single button press on bound zone cross.
- ▼ **Edges2** — pair of buttons from both sides of zone bound will be pressed with bound cross.
- ▼ **Zones** — button is pressed while axis response belongs to the zone.

Set zone number using counter **Num**. 0 and 1 allow to use trailers. Button will be pressed at extreme axis positions. If **Num** = 0, lower trailer will work, if **Num** = 1, than upper.

If you set **Num** = 1 for **Edges2** then **both** trailers, upper and lower will work. If you use this function for throttle axis, when you move throttle lever to zero position, button for ignition or fuel pump stop and so on will be virtually pressed. Maximal position of this lever will press WEP button.

Hysteresis combo box sets width of button actuation in percents of the whole response range. This parameter removes uncertainty of button work near boundary. If **Hysteresis** = 0, the button will be pressed exactly at the boundary.

Set the first button number of sequence using **Vbut1** field. The following button numbers will increase to **Num** field value.

For example four zones were created (**Num** = 4), **VBut1** = 89 and **Zones** type was chosen. When you will rotate axis without center between extreme positions buttons 89, 90, 91, 92 will be pressed consequently. You can map keys to these buttons. If **Num** = 0 or 1 (trailers) in both cases will be pressed button with number equal to **VBut1** field value.



For throttle control axis you can stop engine automatically when throttle will be down. Set **Num** = 0 and assign button with stop engine function to **VBut1** field value. Be careful not to stop engine in flight when you throttle down diving your «Stuka».

3.7.2. MCG Pro folding trigger settings

MCG Pro folding trigger is a lever on axis with MARS sensor. It has two stable positions, folded forward (safe) and down directed (armed). If you press trigger firmly, physical button is activated. On trigger pass up to four virtual buttons can be activated too.

Check **Enable MCG PRO trigger** to enable virtual buttons. Check **Safe**, **Armed**, **Fire1**, **Fire2** to control specific virtual buttons. **Safe** button corresponds to folded position, **Armed** – down directed. **Fire1** and **Fire2** will be activated on trigger pass.

Assign **Safe** button line number using **But N** counter. Line numbers of other buttons will follow. Check Pulse to generate short pulse when button is virtually pressed and even stays in this position (**Safe** or **Armed**). Pulse duration is equal to **T_Tgl** parameter value (see 2.3.1 on p. 16).

Sliders **Fire1** and **Fire2** allow to set trigger position for corresponding buttons activation. Left limit of **Fire1** slider roughly corresponds to **Armed** position. Physical button will be activated near right limit. It is reasonable to distribute virtual buttons evenly by trigger pass.

Axis data group control units allow to set up trigger axis similarly to other ones.



It is not recommended to change axis default settings.

3.8. Axis calibration

3.8.1. Autocalibration

Common parameters

Usually you can calibrate joystick axes automatically. Do the following actions.

1. Check **Cl** option on **Profile – Common-n-Axes – Physical Axes** tab for axes which must be calibrated.
2. Push **Start Calibr** button on **Tools** tab.



If zconfig.ini file contains *PartialCalibration=1* string, you will see **Partial Calibration Settings** dialog (Fig. 3.12).

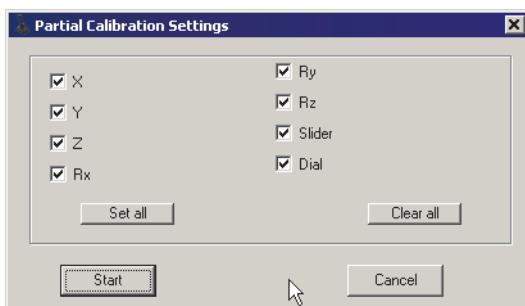


Fig. 3.12.

Check desired axes calibration and press **Start** button.



Lightning mode of LED indicator will be changed (See 2.5 on p. 21), if you have made this setting.



3. Rotate every calibrating axis between extreme positions.

4. Push **End Calibr** button.

If for some reason you want to cancel calibration without saving results, push **Cancel Calibr** button.

MCG Pro folding trigger calibration

MCG Pro folding trigger is an axis. Before you begin to calibrate it, fold it forward (safe position) then return to down directed (armed). To calibrate trigger, after you press **Start calibr** button fold it forward then rotate back and press firmly. That is all.

3.8.2. Manual calibration

Overview

In some cases the results of autocalibration may be insufficient. For example values of **KdHi** и **KdLo** may be equal to 255. Such values are too great and desensitize axis precision (best results are with values about 120 — 180). Or neutral position of the grip does not correspond with the middle of the response range. In this case it is recommended to perform manual calibration. To make this operation it is reasonable to use VKB Joytester program. Download it from VKB site http://ftp.vkb-sim.pro/Programms/VKB_JoyTester.zip. Unpack downloaded archive in the same folder with other VKB utilities.

Joytester interface

Run *VKB_JoyTester.exe* file. The window of this utility is shown in Fig. 3.13.

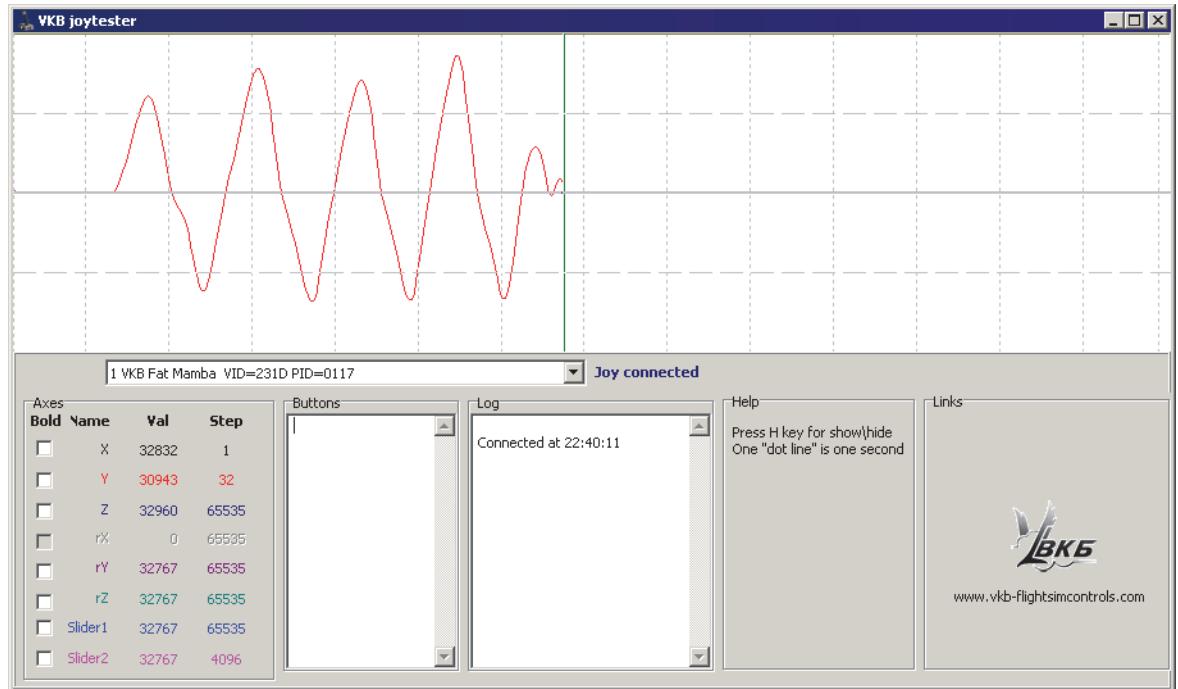


Fig. 3.13.

Select joystick name in **Joy connected** combobox. The most window area occupies axes response diagram. When you move grip, you will see graphic response and its digital value. Check **Bold** to draw axis response with bold line.

When you push buttons you see their numbers in **Buttons** field.



If special function (i.e. Shift or Fix Axes etc.) assigned to the button, you will not see its number.

Axis center correction

If an axis has centerpoint, then when you release it response value of this axis must be equal to 32767 (one half from 65535, maximal value). Inaccuracy in some digits or even tens are acceptable. But if it is too big and centerline of the axis does not match with graph center line, you must correct calibration. **Bias** parameter allows to compensate magnet and MARS positions for digital axis or potentiometer centering for analog one. Try to change **Bias** value about 100 — 150 units with + or - sign and press **Set** button on **Action** tab. Centerline position will be changed. Select such **Bias** value that when the grip stays in the center position response value is about 32767. Do not forget to push **Set** button every time you have changed **Bias** value.

Axis response range correction

Setup axis response range so in pedals extreme positions response value will be equal to 0 and 65535. **KdHi** and **KdLo** values must be in range 100 ... 180. This will provide optimal dynamic range.



Move axis between extreme positions. If response value is greater than 0 or less than 65535 or, on the contrary, the pedal is not in the extreme position but response value already is equal to 0 or 65537, you must correct the range.

Change **KdHi** value, press **Set** button, move the grip and check how axis response value in the extreme position has been changed. Select such **KdHi** value that when the grip is in extreme position response has extreme value too. If you change **KdHi** value but can not reach a goal (value is out of range 100 ... 180), try to change **MPL** value and repeat setup. Then you must setup the other range limit with the same manner, changing **KdLo** value.



While you setup response range, centerpoint can be moved. In this case setup it again.

Calibrate all axes (if it is needed) in the same manner. Calibration results can be saved to file (see 9.3 on p. 102).

Chapter 4. Physical buttons

4.1. Overview

When we describe joystick we use common term *Button*. Really it can be any device that can close two contacts. For example it can be tact switch, toggle switch, HAT switch, rotary switch, encoder etc. Every pair of button contacts is represented as single *line*. So simple button occupies one line, toggle switch On-Off-On – two lines, 4-way HAT — 4. Njoy32 controller can process up to 128 lines.

Speaking about joystick controls we must distinguish *input*, that is button, HAT etc. and *output* – the result of physical controls conversion, that is virtual axes, generators, trimmers, modifiers and even simple buttons too.

Control items of **Profile — Buttons** tab (Fig. 4.1) allow to set up joystick buttons.

Common n-n Axes		Buttons								
Physical layer		Logical layer								
Srv		Line 1	Line 2	Line 3	Line 4	Line 5	Line 6	Line 7	Line 8	Poll
Reg#1	B	B	B	B		En2 Ax#6:256x		TrRst Axes 6	B	
Reg#2	B	B	B	B		G1 Pulses 48x	G1 Pulses 48x	B	B	
Reg#3	Enc Ax#7:128x		TrRst Axes 27	B			TrRst Axes 8	Enc Ax#8:128x		
Reg#4	B	B	S1	DR Axes 12	FA0 Axes 12		B	B 121	B	
Reg#5	B	B 1	B	B		B 69	B 70	B 71	B 72	
Reg#6	B	G8 Pulses 1x	B	G8 Pulses 1x	B		B	B	B	
Reg#7	B	B	B	B		B	B	B	B	
Reg#8	B	B	B	B		B	B	B	B	
Reg#9	B	B	B	B		B	B	B	B	
Reg#10	B	B	B	B		B	B	B	B	
Reg#11	B	B	B	B		B	B	B	B	
Reg#12	B	B	B	B		B	B	B	B	
Reg#13	B	B	B	B		B	B	B	B	
Reg#14	B	B	B	B		B	B	B	B	
Reg#15	B	B	B	B		B	B	B	B	
Reg#16	B	B	B	B		B	B	B	B	

Fig. 4.1.

Every eight lines are grouped to registers, *Reg#1*...*Reg#16*. Lines have consequent numbers.

4.2. Physical button functions

Regardless of contact maker physical realization of its line can execute the following functions.

- ▼ Button — simple button,
- ▼ Button alternative — button with fixation,
- ▼ ButtonS — button under control of subshifts #1-6,
- ▼ ButtonX — button under control of subshift #7,
- ▼ Shift — button modifier,

- ▼ SubShift — subshift, additional button modifier,
- ▼ Toggle — toggle switch,
- ▼ Encoder — encoder,
- ▼ POV switch — HAT switch,
- ▼ uStick switch — POV mode switch,
- ▼ Generator — generator,
- ▼ Tempo — two-function-button; output depends of pressing time,
- ▼ Fix_Axes — axes modifier,
- ▼ AuxAxes — axes mapping,
- ▼ RelAxes — relative axis mode control,
- ▼ Boolean — Boolean functions for buttons (OMG!!!),
- ▼ Cyclic Switch — cyclic switch,
- ▼ Trimmer — axis trimmer,
- ▼ Curves — dynamic axis response curve switch,
- ▼ Sync — toggle synchronizer,
- ▼ RPB — button replicator,
- ▼ OFF — expulsion button from the processing,
- ▼ NoF — no function.

4.2.1. Button mapping wizard dialog

Control items of **Button mapping wizard** dialog (Fig. 4.2) allow to assign any function to chosen physical button line.

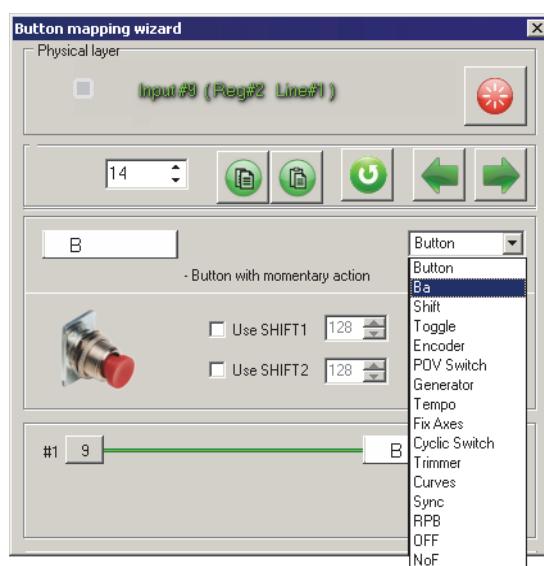


Fig. 4.2.

This dialog appears after left mouse button click on button cell.

Line (input control) choice

Parts of the string in **Physical layer** group show current line number, its register number and position in the register. Fig. 4.2 shows that current line is #9. It belongs to the first line of the second register. Press **Capture** button to check line and button correspondence (see 4.2.2 on p. 45).



Counter value shows line number too and allows to go to another button to set it up. **Next** and **Previous** buttons allow to go to corresponding lines. When you go to next button settings for current one will be fixed. Thus to go to distinct button you can close **Button mapping wizard** dialog and click desired button cell directly or use controls of this dialog.



Cancel buttons disables any current settings changes. For example you set button #9 as Shift and pressed **Next** button to setup next line. Current assignment for button #9 (*Shift*) will be fixed. Then you return to button #9 and choose *BA* function. Press **Cancel** button to restore previous (*Shift*) function.



Copy cell button allows to copy current line parameter set to clipboard.



Paste cell button allows to apply parameter set from clipboard to current line.

Output function choice

Choose output function for current line from combo box. Additional control items for this function will appear in dialog. Some functions, for example, simple button, allow alternatively using with Shift modifier. For those functions checkboxes *Use Shift 1* и *Use Shift 2* will be enabled.



You can use two independent modifiers *Shift 1* and *Shift 2*.

If for example *Use Shift 1* is checked, you can select the second line number that will be pressed if you press physical button simultaneously with Shift.

Example. Current button line number is 9. For shifted button you can choose 28.



Assigning additional line be careful. This number must NOT be the same with existing physical button line. But you CAN assign such (occupied) number. If this button line number was reassigned too. For example, gun trigger occupies physical line number 17. If you want to use it with «beautiful» number reassign it to 1.

Free line choice

To make sure that desired line number is free, double click line number counter with left mouse button. Dialog **Virtual layer** (Fig. 4.3) will appear. Red colored numbers are occupied, black – free. To choose number click it.

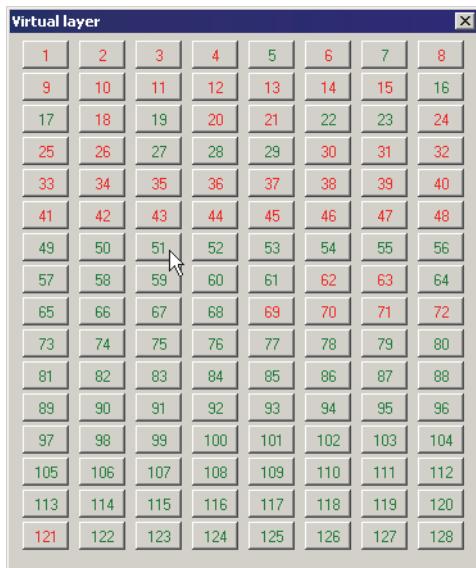


Fig. 4.3.

Logical (output) function choice

Almost all functions have subfunctions. Additional control items allow to customize parameters. Click current function field to see these controls (1, Fig. 4.4).

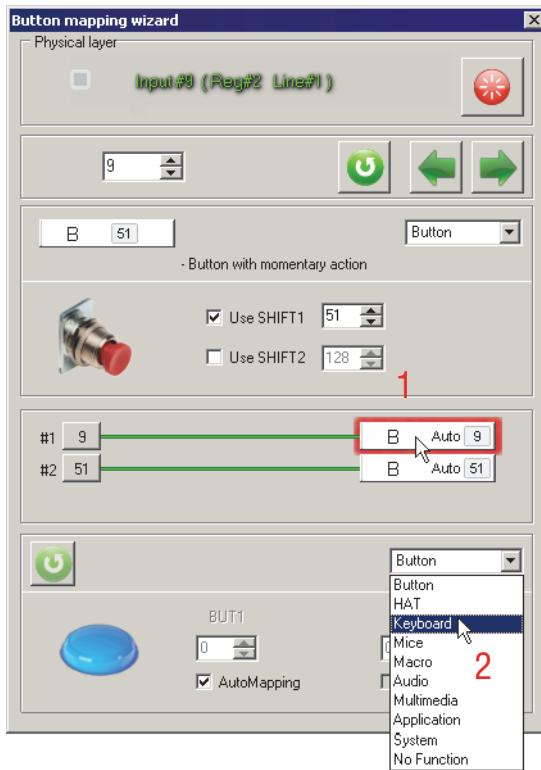


Fig. 4.4.

Subfunction names are listed in combo box (2, Fig. 4.4).

Another way to get subfunction list is shown on Fig. 4.5).

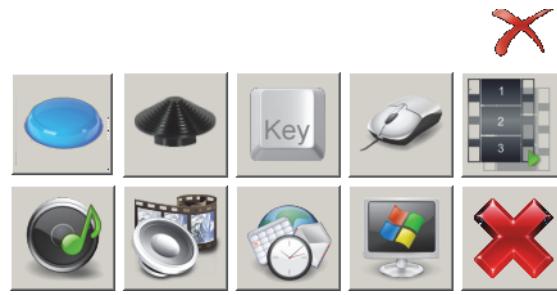


Fig. 4.5.

Detailed description of logical functions you can find in Chapter 5 on p. 82.

4.2.2. Line number check

To see line number of any joystick control check **Poll** on **Physical layer** tab. After that if you press button, HAT, rotate encoder etc. cell of its line will flash.



Polling does not work if **Button mapping wizard** dialog is opened.

If **Button mapping wizard** dialog is opened you can check pressing too. If you press corresponding button it will be indicated.

4.3. Button customization

4.3.1. Button, simple button

Button

Description

When you press button by default output logical line number will correspond with physical one. To reassign logical number click current function name field (1 on Fig. 4.4 on p. 44). Additional control items will appear. **BUT1** field contains logical (output) line number. To remap button uncheck **Automapping**. **BUT1** counter will be enabled. Set desired output number (Fig. 4.6).

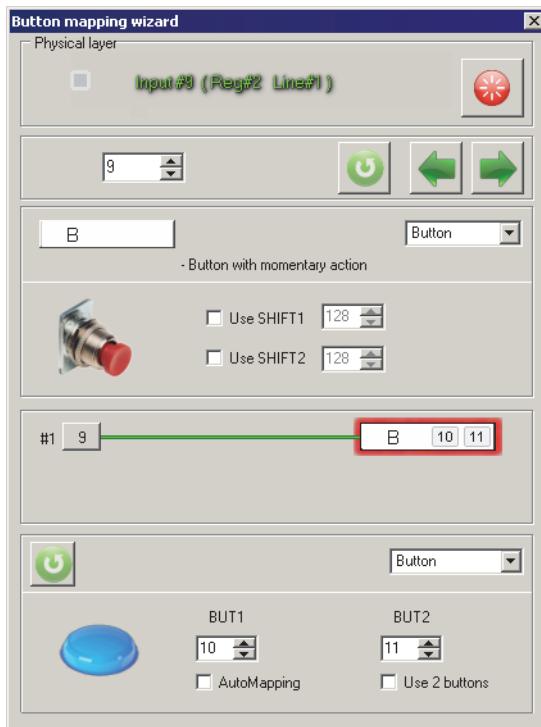


Fig. 4.6.

When remapping will be useful? Let's assume the current button number is greater than 32. Some games does not recognize button numbers upon this value. You can map your button to key or remap to line of available range.

Check **Use 2 buttons** to «press» two logical buttons simultaneously with physical one and set second line number using counter **BUT2**. See Fig. 4.6. When you press button with number 9 (Toggle switch Batt on the left side of Fat Black Mamba case) buttons 10 and 11 will work.

Modifier *Shift* can be used with simple button.



Physical button pressing can be indicated using LEDs (see 2.5.2 on p. 25).

Example 1.

Line 32 is shown on Fig. 4.7. It corresponds to the first trigger of HOTAS Warthog grip on Fat Black Mamba case.



Fig. 4.7.

It is used as simple button (sign **B**). If you press trigger with Shift1 line 56 will work. For Shift 2 it will be line 64.

Restrictions:

NJoy32 controller can process up to 128 physical buttons.

4.3.2. Button with fixation

BA

Description

After you press and release button (input) BA will stay depressed (on hold) until you will press it again (output). You can assign another logical number for BA.

Restrictions:

Shift function not allowed.

4.3.3. Button controlled by subshifts 1...6

ButtonS

Description

Button controlled by SubSHIFT #1...6.

Set number of subshift that will control this button using **SubSHIFT #** counter and logical line number using counter **Button** (Fig. 4.8). By default it is physical one +1.

Logical line functions are the same with simple button.

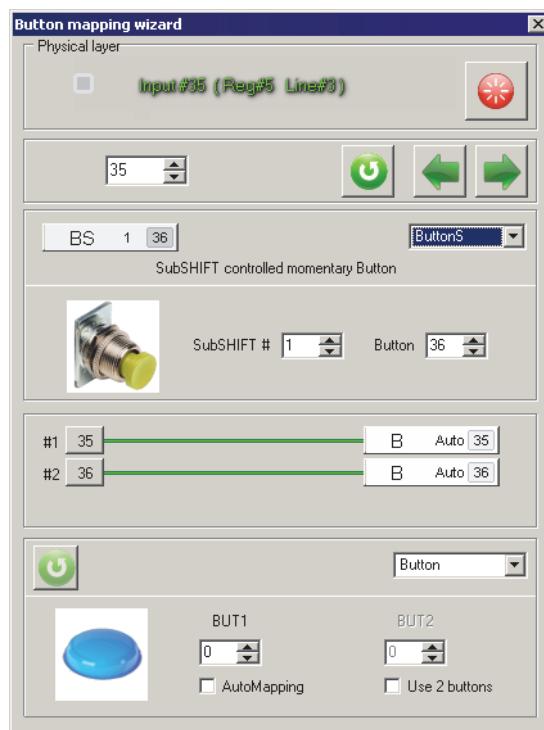


Fig. 4.8.

Subshift settings see in 4.3.6 on p. 50.

4.3.4. Button controlled by subshift # 7

ButtonX

Description

Button controlled by SubSHIFT #7.

The number of output line depends on combination of global Shift modifier and SubShift local modifier.

If this button is not controlled by global Shift (Fig. 4.9, a), than output line number will correspond to physical one (Fig. 4.9, 6). If you press button depressing SubSHIFT 7, output line number will be equal to counter **subShift Button** value (Fig. 4.9, b).

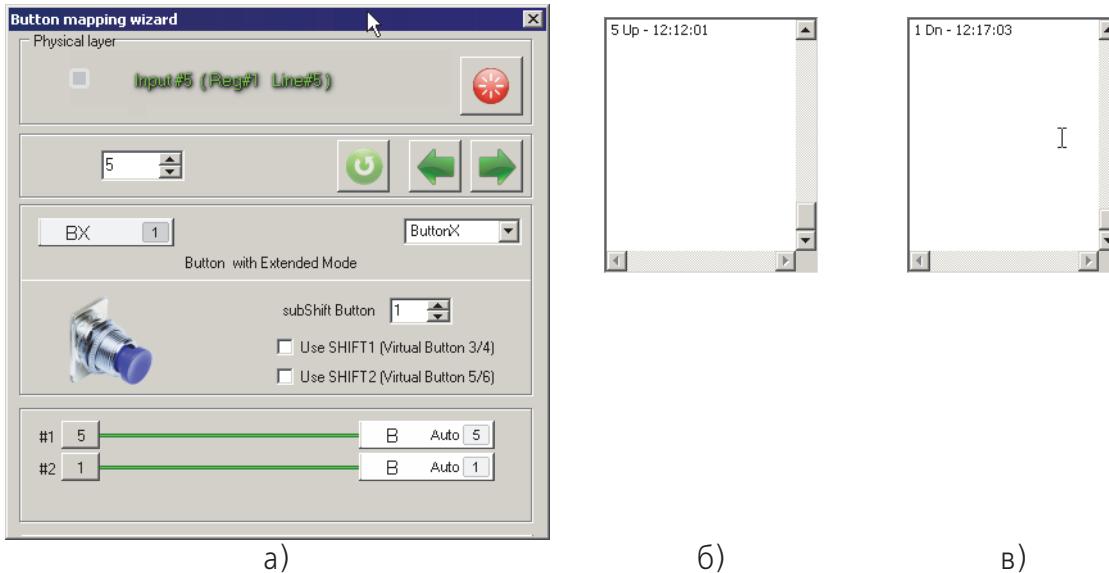


Fig. 4.9.

If this button is controlled by global Shift (**Use SHIFT1 (Virtual Button 3/4)** checked, Fig. 4.10), than output line numbers will depend of Shift 1 и SubSHIFT 7 states and by default will go after line number assigned in **subShift Button** counter.

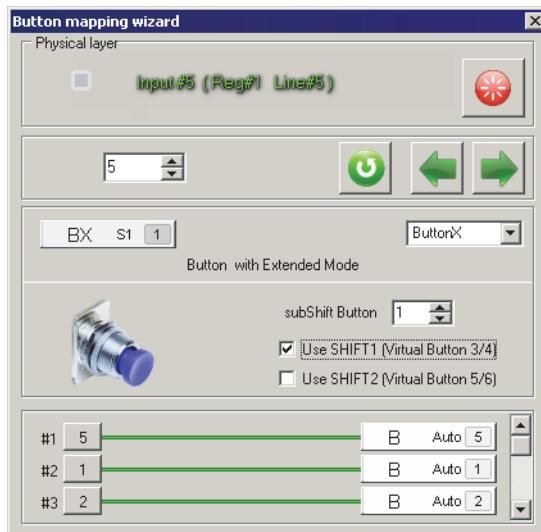


Fig. 4.10.

You can see an example of line numbers depending of modifiers state in table 4.1(for described figure).

Table. 4.1.

	SHIFT1	Off	On
SubSHIFT			
Off		5	2
On		1	3

4.3.5. SHIFT1 / SHIFT2 / SHIFT0 modifiers

Shift

Description

Modifiers allow to multiply button number similarly to keyboard modifiers Shift, Ctrl, Alt.

Parameters

Modifier parameters are shown in **Button Mapping Wizard** dialog (Fig. 4.11).

Track as button checkbox allows to use button with **Shift** function as simple button too. In this case its parameters will be the same as for simple button (see 4.3.1 on p. 45). If checked then when you press SubShift it will modify dependent buttons AND work as joystick button too.

Select shift mode from combo box (Fig. 4.11, 1). Controller can process up to two shifts, so one input line can have three output ones. *Shift0* allows output signal if no other Shift (1 or 2) is pressed.

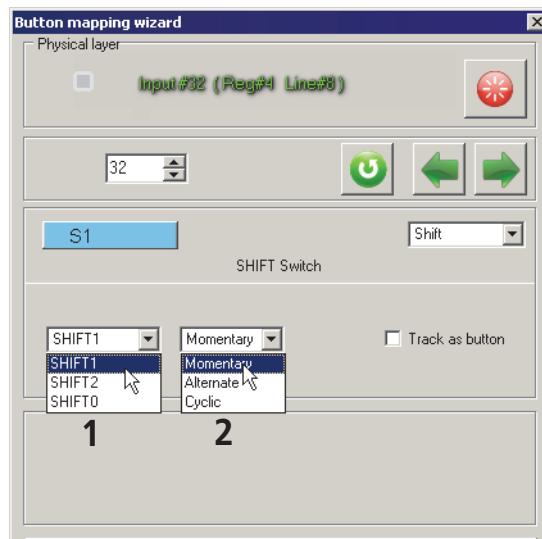


Fig. 4.11.

With *Shift0* you can, for example, use middle position of three-position slider on the Mamba family grip. Physically it is ON-OFF-ON toggle switch. It has no signal in the middle position.

Assign *Shift1* and *Shift2* functions to both ON positions. Assign *Shift0* function to any button. **Track as button** will be checked automatically.



DO NOT map *Shift0* button to keystroke! It will work if no *Shift1* or *Shift2* are pressed that is practically permanent. Simple button even depressed generates continuous but single output signal. Keystrokes will repeat thus flood system keyboard buffer. In this case you must disconnect joystick.

Shift1 and *Shift2* modifiers can be indicated by LEDs (see 2.5 on p. 21).

Shift1 и *Shift2* modes:

- ▼ Momentary — common, analog to Shift modifier,
- ▼ Alternate — with holding, analog to CapsLock modifier,
- ▼ Cyclic — cyclic.

Select mode from combo box (Fig. 4.11, 2).

In **Cyclic** mode every button press changes modifier type (**Shift 1** and **Shift 2**). For example button #9 was mapped to following keystrokes:

- ▼ without modifier — a,
- ▼ Shift 1 — b,
- ▼ Shift 2 — c.

Press Shift button and button #9. You will get letter . Release buttons. Press Shift once again and button #9. You will get letter <c>.

4.3.6. SubSHIFT modifier

SubSHIFT

Description

When you press *Shift* button, it affects all buttons that have checked **Use SHIFT**. *SubShift* function is intended to affect limited number of buttons.

Button Mapping Wizard for **SubSHIFT** function has additional control items (Fig. 4.12).

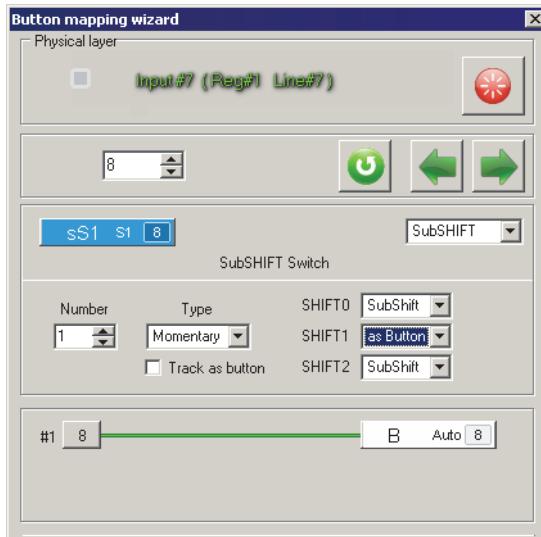


Fig. 4.12.

Set subshift number with **Number** counter. Maximum subshift number is equal to seven.

SubShift modes:

- ▼ Momentary — common, analog to Shift modifier,
- ▼ Alternate — with holding, analog to CapsLock modifier.

Button with **SubSHIFT** function may depend of **Shift** modifier. Select button mode from combo box for every Shif1 (0...2). When Shift is pressed SubShift button can work as simple button (shifted), or stay **SubShift**.

Track as button checkbox allows to use button with **SubShift** function as simple button too. In this case its parameters will be the same as for simple button (see 4.3.1 on p. 45). If checked than when you press SubShift it will modify dependent buttons AND work as joystick button too.



If **Track as button** is checked than button does not depends of global **Shift**.

Assign *ButtonS* function for buttons depending of SubShifts 1...6 (see 4.3.3 on p. 47).

Assign *ButtonX* function for buttons depending of SubShift 7 (see 4.3.4 on p. 47).

4.3.7. Toggle switch

Toggle

Description

When you close control with **Toggle** function a short pulse will be generated even if the line stays closed. Pulse length is specified by **Time of toggle pulse** global parameter (see 2.3.1 on p. 16). When you open control line with another number can work. By default this number is greater by 1 but can be changed. If you assign

the same number than when you press and release control two pulses with identical numbers will be generated.

Button mapping wizard dialog for Toggle function is shown on Fig. 4.13.

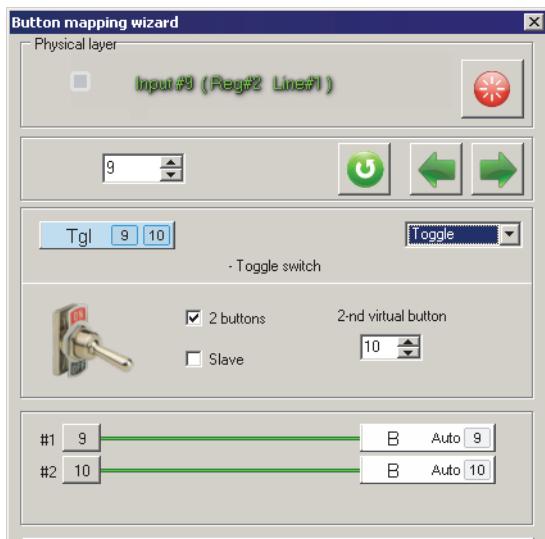


Fig. 4.13.

2buttons checkbox controls the ability of the second line work with opening control. If it is checked assign the second line number (for opening pulse) using **2nd virtual button** counter.

Three-position (On-Off-On) Toggle switch features

Synchronization

You can see three-position toggle switch on the back side of Fat Black Mamba case. It is named as **Flaps**. We use this switch to control flaps. When you push toggle stick down flaps go down, Upper position will retract flaps. Middle position does nothing. As it was mentioned above toggle signal is generated at a switch moment. When stick stays stable It does not know about its state. **Sync** function (see 4.3.17 on p. 71) allows to synchronize toggle switches state. When you press button with this function all toggle switches will be polled and controller will get there state. So if Flaps toggle was in the lower position in this time flaps will go down. There is an issue with middle toggle stick position. **Slave** function allows to get this position.

Lower position of Flaps toggle switch of Fat Black Mamba joystick corresponds to line number 13 and upper position to #14. For example assign line #15 to middle position.



Physically line #15 is used by **Pump** toggle switch situated on the left side of Fat Mamba case. We can assign another line number (logical) for this switch so it will not be lost.

Click cell #13. You will see **Button Mapping Wizard** dialog. Choose **Toggle** item from combo box. Check **2 buttons** and **Slave**. Set **Master Toggle** counter to 14 (Fig. 4.14).

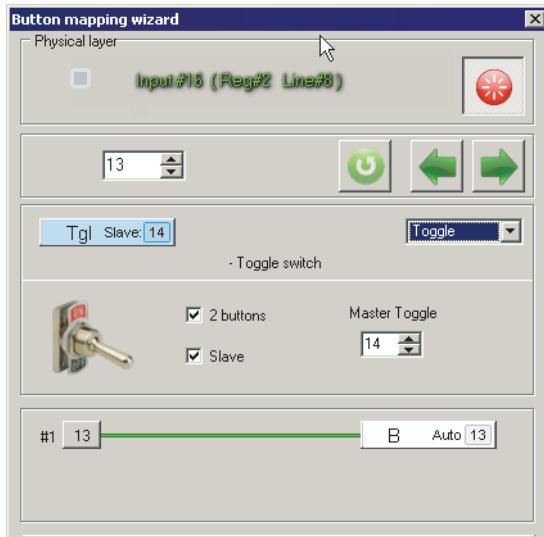


Fig. 4.14.



Go to next line settings. Check **2 buttons** and set **2-nd virtual button** counter to 15 (Fig. 4.15).

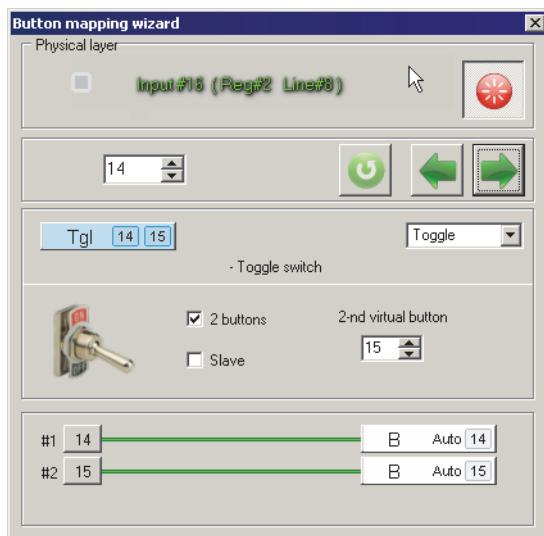


Fig. 4.15.

After you apply these settings pressing **Set** button Flaps toggle switch will generate the following signals:

- ▼ switching down — line # 13,
- ▼ switching to the middle from any position —line # 15,
- ▼ switching up — line # 14.

Physical button as toggle switch

Simple button can be configured as toggle switch. For what? Battle of Stalingrad simulator. You must press button to see briefing. Then you must press it again to cancel viewing. Using button as toggle switch you can use single press. You will see briefing while button is depressed. Release button and return to cockpit view.

How to? Choose any button and assign **Toggle** function to it. Check **2 buttons** and assign the same line number to **2-nd virtual button** counter (Fig. 4.16).

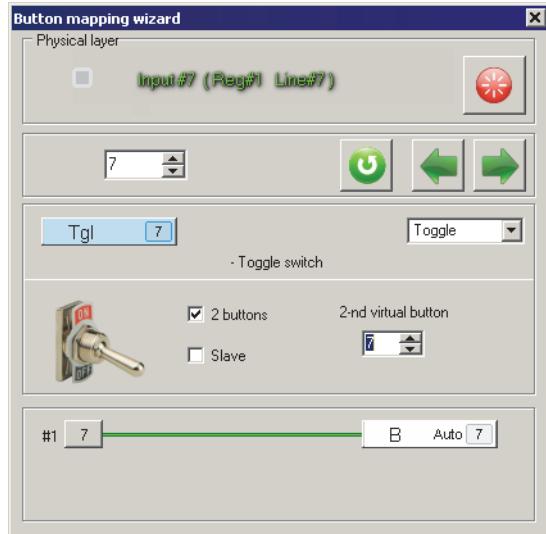


Fig. 4.16.

When you physically press button virtually it will be «pressed and released». When you release button its line will be «pressed and released» once again (Fig 4.17).

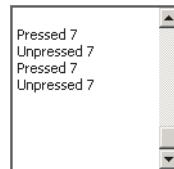


Fig. 4.17.

Restrictions

Controller can process up to 64 toggle switches. *Shift1* and *Shift 2* modifiers do not affect toggle switches.

4.3.8. Encoder

Encoder

Description

Encoder converts axis rotation to pulse sequence. Mouse wheel is an example of encoder. Encoder looks like potentiometer. Encoders of VKB joysticks are presented as three lines. Two of them generate signals when you rotate encoder wheel and the third works when you press wheel axially.



Some encoders have no axial button

For some objects or processes (zoom view, trimmers) significant is not absolute but reference position. And vice versa for example you always must know throttle or RPM lever position. Instead of potentiometer encoder has no extreme positions.

Encoder occupies two lines for axis and one line for axial button if it exists.

Physical encoder can be configured in the following modes:

- ▼ discrete — encoder wheel rotation is converted to pulses of two lines referenced to rotation direction.
- ▼ analogue — encoder works similarly to physical axis; this virtual axis can be considered as independent axis or be used to trim existing one.

Discrete encoder

Choose **Discrete** item from **Type** combo box. See Button mapping wizard dialog for discrete encoder on Fig. 4.18.

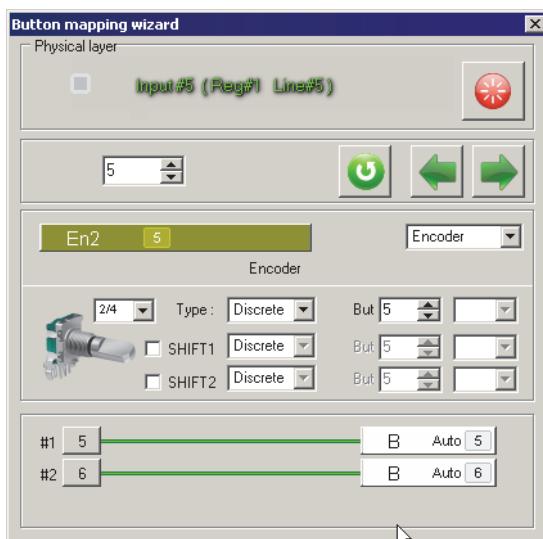


Fig. 4.18.

Encoder wheel is rotated discretely with clicks. Select number of pulses that will be generated for every click:

- ▼ 1/4 — four pulses,
- ▼ 2/4 — two pulses,
- ▼ 4/4 — single pulse.

When you assign **Encoder** function to a line adjacent one will be reserved automatically. Current line generates pulses on rotation to one direction, next for another direction.

The first encoder line must be odd. If you try to assign encoder function to even line warning message appears (Fig. 4.19).



Fig. 4.19.

The number of the first encoder physical line on Fig. 4.18 is 23. By default the next line #24 is reserved. You can remap logical (seen in game) line to another number using **But** counter. You can assign logical functions to encoder lines.

Encoder lines can be modified (added additional line numbers) with *Shift1* and *Shift2* modifiers. To use shifts check corresponding control items and choice line numbers using **But** counters. Modified (virtual) encoders can be set as discrete or analogue similarly to physical one.

Encoder pulse time is equal to **T_Enc** global parameter value (ms). It is recommended to set this value not less than 15 ms.

You can set encoder axial button similarly to simple button (see 4.3.1 on p. 45). It is recommended to assign **Trimmer reset** function to it.



You can use single button to reset several trimmers simultaneously.

Analog trimmer

Select **Trimmer** item from Type combo box to use encoder as analog device. **Button mapping wizard** dialog for this mode is shown on Fig. 4.20.

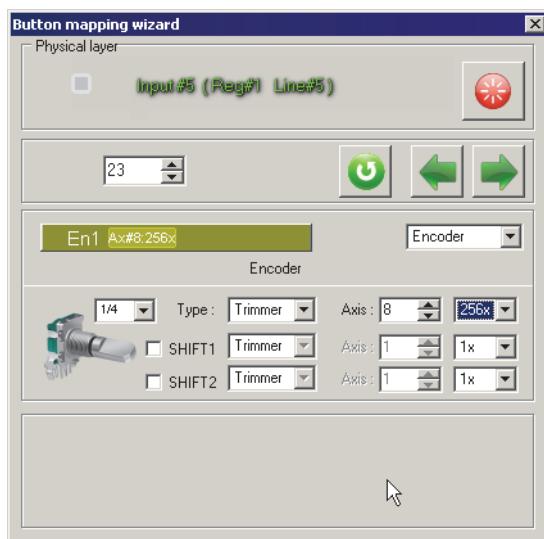


Fig. 4.20.

Encoder wheel rotates discretely with clicks. Number of output pulses per one click you can select from combo box. This parameter together with **Multiplier**, specifies

the shape of axis response curve. See examples of response curve on Fig. 4.22, 4.23, 4.24.

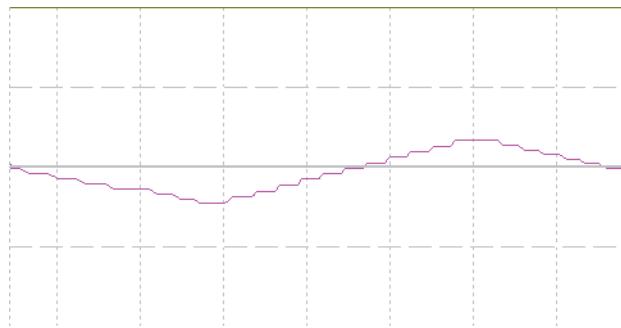


Fig. 4.22. Pulses per click 4/4, Multiplier 32



Fig. 4.23. Pulses per click 4/4, Multiplier 256



Fig. 4.24. Pulses per click 1/4, Multiplier 32

Assign number of the axis that will be controlled by encoder using **Axis** counter. If existing axis has this number it will be trimmed by encoder. If no axis has this number, new one will be created.



Do not forget to enable this axis and make it visible (check **En** and **Vs** on **Profile — Common-nAxes — Logical axes** tab). Set this axis as **Virtual** on **Physical Axes** tab.

Restrictions

Total of encoders must not be more than 64.

4.3.9. Hat

POV Switch

Description

Physically discrete HAT is four-position switch. It consists of four pushbutton switches with shaft. HAT uses four lines. Virtually HAT can be represented as eight-position switch. Intermediate positions are generated by software.

HAT position names are:

- ▼ HR — to right,
- ▼ HD — down,
- ▼ HL — to left,
- ▼ HU — up.

Check **ALPS** to enable HAT pushbutton.

Button mapping wizard dialog for HAT is shown on Fig. 4.25.



Fig. 4.25.

Set current HAT index using **Number of POV** counter. Set HAT position for current line pressing corresponding arrow pr central button on HAT image.



Usually HAT is used for viewing (if you do not use NaturalPoint TrackIR or other similar device). If you do not need HAT as view controller you can configure it as four simple independent buttons. In this case you must configure lines of HAT as buttons (see 4.3.1 on p. 45). Thus you can add up to twelve buttons (using *Shift1* and *Shift2* modifiers).

Restrictions

Total of HATs must not be more than 4. Global parameter **#Hat** (see 2.4.1 on p. 17) specifies maximum HAT number for current configuration.

4.3.10. Pulse generator

Generator

Description

When you press button with this function pulse sequence will be generated. Global parameter **T_Gen** (see 2.3.1 on p. 16) specifies pulse frequency. The following generator types can be used:

- ▼ G1,
- ▼ G8,
- ▼ GT,
- ▼ GT+,
- ▼ GTE,
- ▼ GTE+,
- ▼ GTR,
- ▼ GTR2,

Button mapping wizard dialog for generators is shown on Fig. 4.26.



Fig. 4.26.

Choose generator type from **Generator Type** combo box. You can use logical functions for generator pulses. If generator line is used as joystick button than single pulse with specified parameters will be generated. If his line is mapped to keyboard than series of keystrokes will be generated for specified pulse length (or pulse number). Keystroke frequency corresponds wits operation system settings.

G1

Generates specified number of pulses with single button press. Set this number using **Value** counter. Checking **x10** you can multiply specified number to 10. Example. **Value** is equal to 7, **x10** checked. 70 pulses will be generated.

Flaps toggle switch (Fat Black Mamba) settings are shown on Fig. 4.26. It is used for manual gear retract. Keystroke *<Shift>+<G>* is mapped to lower toggle switch position. When you lower handle this keystroke will be generated 50 times. It guaranteed retracting gear of Polikarpov I-16 in Il-2 Sturmovik.

G8

Generates pulse batches with specified frequency all the time button is pressed. Set number of pulses in a single batch using **Value** combo box.

H4U button of CMS HAT (HOTAS Warthog grip with Fat Black Mamba case) settings are shown on Fig. 4.27.

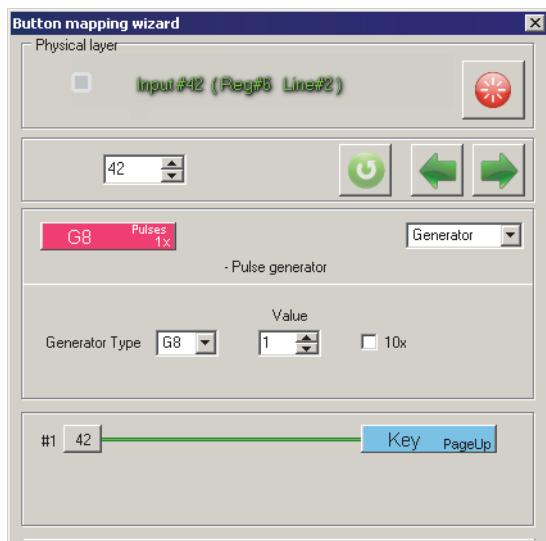


Fig. 4.27.

This button is used to zoom in. *<Page Up>* keystroke is mapped to this button. H4D button of this HAT is specified as G8 too and mapped to keystroke *<Page Down>*. Buttons control zoom in and out.

GT

Generates single pulse of specified length on button press. No matter to button state - will it stay depressed or released.

Set pulse length in **Value** field, 0,01 s, from 1 to 127. Checking **x10** you can multiply specified length to 10. Example. **Value** is equal to 20, **x10** checked. 2 s pulse will be generated. Thus GT pulse length range is 10 ms to 12,7 s.

GT+

Generates single pulse of specified length on single button press. If the button will stay depressed more than pulse length, it will be generated until you release button.

Set pulse length in **Value** field, 0,01 s, from 1 to 127. Checking **x10** you can multiply specified length to 10. Example. **Value** is equal to 20, **x10** checked. 2 s pulse will be generated. Thus GT pulse length range is 10 ms to 12,7 s.

If you press **GT+** several times pulse periods will be summarized.

GTE

Generates single pulse of specified length on button press. No matter to button state - will it stay depressed or released.

Set pulse length in **Value** field, 0,01 s, from 1 to 127. Checking **x10** you can multiply specified length to 10. Example. **Value** is equal to 20, **x10** checked. 2 s pulse will be generated. Thus GT pulse length range is 10 ms to 12,7 s.

GTE+

Generates single pulse of specified length on single button press. If the button will stay depressed more than pulse length, it will be generated until you release button.

Set pulse length in **Value** field, 0,01 s, from 1 to 127. Checking **x10** you can multiply specified length to 10. Example. **Value** is equal to 20, **x10** checked. 2 s pulse will be generated. Thus GT pulse length range is 10 ms to 12,7 s.

If you press **GT+** several times pulse periods will be summarized.

Differences between GT and GTE

GT generators are independent. One generated pulse can not be interrupted. If your generator assigned to extend gear it will work the whole time. GTE pulse can be interrupted by another one! For example keystroke F assigned to extend flaps of LaGG-3. Button has GTE function with time equal to 10 seconds. You have pressed button and flaps began to go down. Keystroke V assigned to retract flaps and its button has GTE function too.

You need to retract flaps before full extending. When you press GTE with V keystroke it will interrupt the first generator and flaps will be retracted.

GTR

Generates single pulse of specified length on button press. The second press interrupts pulse.

Set pulse length in **Value** field, 0,01 s, from 1 to 63. **Multiplier** combobox allows to select multiplication factor. **x10** will multiply specified length to 10. Example. **Value** is equal to 2, **100x** selected. 2 s pulse will be generated.

GTR2

Generates pair of short pulses divided by specified period on button press. The second press generates the second pulse of pair before period ends. Short pulse length is specified by **T_Gen** parameter (see 2.3.1 on p. 16).

Set period between pulses length in **Value** field, 0,01 s, from 1 to 63. **Multiplier** combobox allows to select multiplication factor. **x10** will multiply specified length to 10. Example. **Value** is equal to 2, **100x** selected. Period length will be equal to 2 s.

4.3.11. Two stage button (Tempo)

Tempo

Description

Button signal depends on button depressing time. The short press will cause signal of one line but more long one – another one. Such function is used in real modern planes. **Tempo Time** global parameter (see 2.3.1 on p. 16) specifies depressing period. Button mapping wizard dialog for Tempo function is shown on Fig. 4.28.

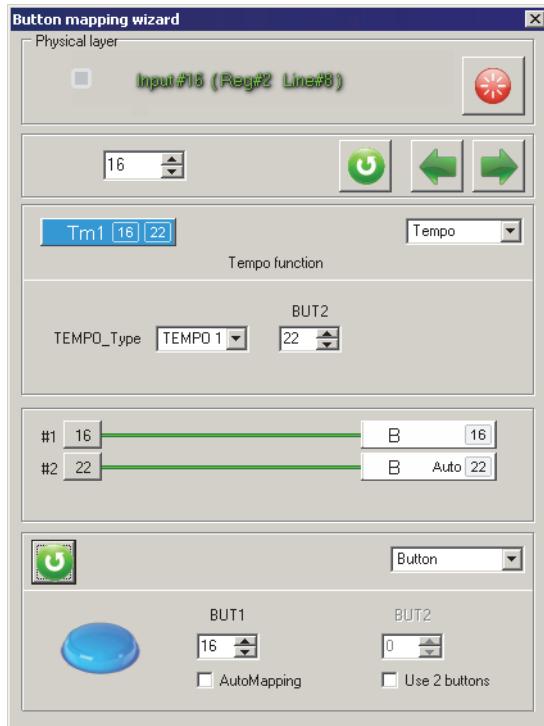


Fig. 4.28.

Use **BUT2** counter to choose the second line number (see Free line choice on p. 43). Both lines of TEMPO can use logical functions. If button depressing time is less than **Tempo Time** value, than first line pulse time will be equal to **T_Tgl** value (see 2.3.1 on p. 16). If depressing time exceeds **Tempo Time** value the result depends on **TEMPO Type** parameter.

- ▼ **Tempo 1** – second line pulse length is equal to **T_Tgl** value in no matter to real depressing time.
- ▼ **Tempo 2** – second line pulse length is equal to button depressing time.

4.3.12. Axes fixation

Fix Axes

Description

Axis modifiers allow to set specified axis response value.

FA0

Allows to set current axis position as its center («helicopter trimmer»). Fig. 4.29 shows response of axes X and Y with **FA0** function enabled depending on **Trimmer mode** parameter (see 3.2.3 on p. 30).

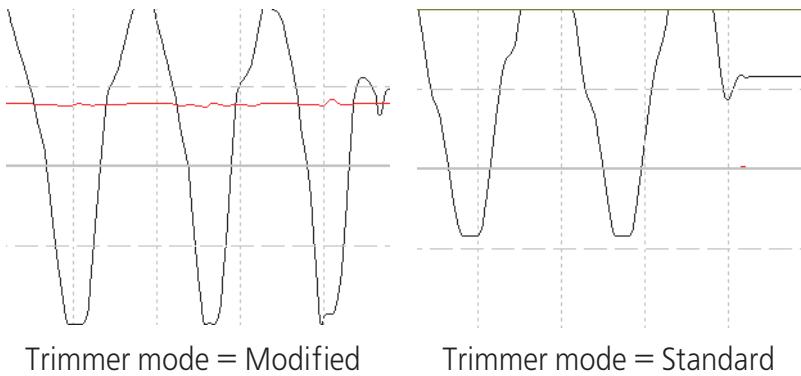


Fig. 4.29.

FA1

Fixes axis without center (throttle, for example) in zero position and axis with center (pitch, yaw etc.) in central position. Axis is fixed until button with FA1 function will be released.

FA2

Fixes axis in the current position. Axis is fixed until button with FA2 function will be released.

FA3

Sets axis response to specified value. **FA3 val** variable specifies response value in percents of the whole response range. This parameter for each axis you can find on **Profile — Common-n-Axes** tab. Fig. 4.30 shows X and Y axes response when FA3 button is pressed four times. **FA3 val** is equal to 45.

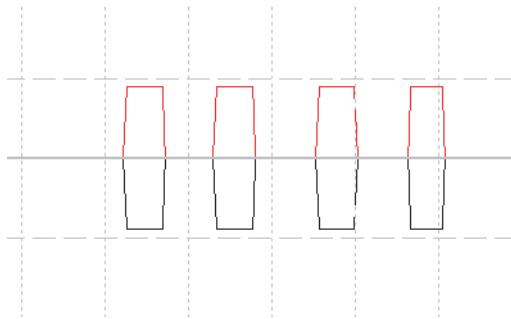


Fig. 4.30.

Indeed joystick grip stayed in the center.

DR

Reduces axis response in specified rate. **D.Rate (Global — Common tab)** parameter specifies rate value in percents of the whole range. This function can be useful when you aim the target. It is similar to *Curves* function (see 4.3.16 on p. 70). Fig. 4.31 shows *DR* button work. This button was depressed for some time and then released. Joystick grip was moved by the same manner within the whole range.

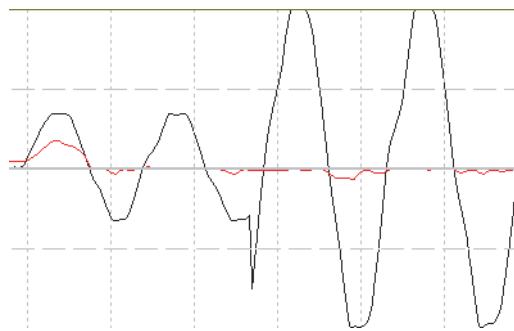


Fig. 4.31.

FA2, FA3, DR modifiers have **alternate action**. If it is checked modifier works as trigger that is the first press enables axis fixation and the second disables it.

Button mapping wizard dialog for axis fixation functions is shown on Fig. 4.32.

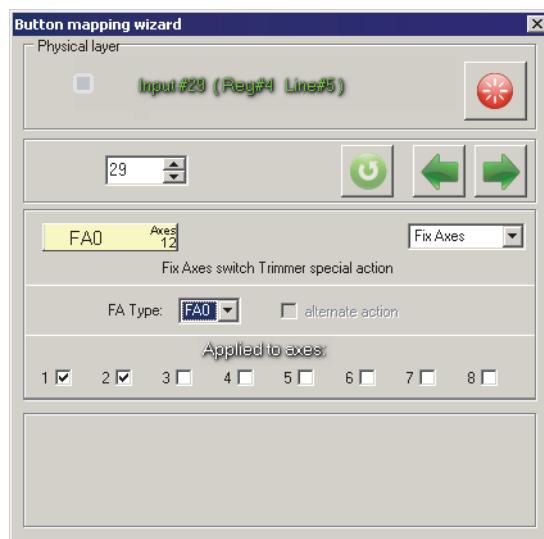


Fig. 4.32.

Choose fixation mode from **FA Type** combo box. Check axis numbers that will be affected in **Applied to axes** group.

Modification parameters:

- ▼ **FA on Global — Common** tab —enables modification.
- ▼ **FA0, FA1, FA2, FA3** variables (ms) — specify transition time for corresponding function (modifications are applied to axis response not immediately).

4.3.13. Auxiliary axis

AUX Axes

Description

Functions of this group allow «swap» axes. **Button mapping wizard** dialog for AUX axes is shown on Fig. 4.33.

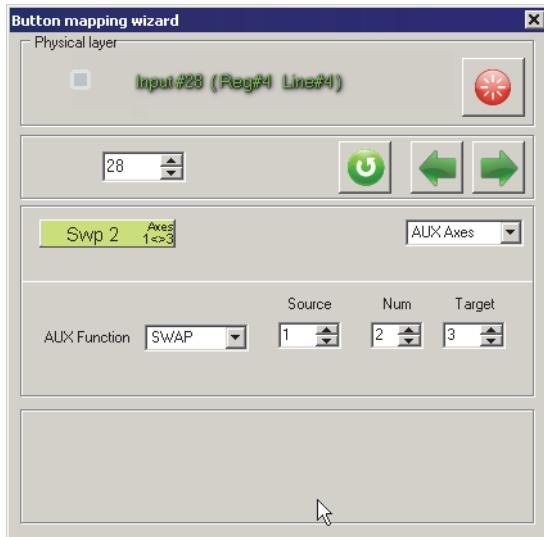


Fig. 4.33.

Choose function from **AUX Function** combo box.

SWAP

Allows to rotate physical axis (source) but get response of another one (target) if **SWAP** button is pressed. Source axis response in this case will be equal to zero for axis without center or goes to the center for axis with it. Target axes response will be equal to source one on the moment of button pressing (Fig. 4.34, a). If target axis is inverted, than response value will be inverted too (Fig. 4.34, b).

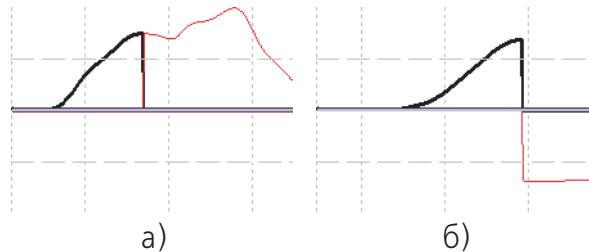


Fig. 4.34.

Select source axis number from **Source** combo box and target one from **Target** combo box. For example shown on Fig 4.33 on p. 64 when you will rotate X (#1) axis with pressed SWAP button Z (#3) axis response will vary. SWAP button can affect several axes. **Num** field value specifies modified axes number. If **Num=2**, than for this example when you press SWAP button and rotate X (#1) axis than Z (#3) axis will be «rotated». Y (#2) axis rotation will «rotate» Rx (#4) axis.

REMAP

Allows rotate several axes linked with source axis. An example is shown on Fig. 4.35.

X (#1) axis is source, Z (#3) is target. Fig. 4.35, a) – REMAP button released. When you rotate each of these axes they work. X (#1) axis response is drawn by bold line.

Fig. 4.35, b) – REMAP button is pressed. When you rotate X (#1) axis it does not response. When you rotate Z (#3) axis than X axis «rotates» too.

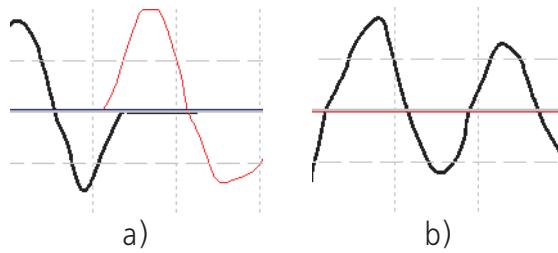


Fig. 4.35.

If target axis is inverted than its response will be inverted too.

Set number of linked axes in **Num** field. For example if **Num=2**, then rotation X (#3) axis will cause rotation of #3 and #1, rotation axis #4 — #4 and #2.

SWITCH

Modifier is opposite to REMAP. If button with SWITCH function is pressed target axis is disabled. Response of this axis will appear if source axis will be rotated. All other function parameters are the same to REMAP function ones.

Axis #1 is source and axis #3 is target (Fig. 4.36). Fig. 4.36, a) button with SWITCH function is not pressed. Axes #1 (bold line) and #3 response separately. SWITCH button is pressed (Fig. 4.36, b). When you rotate axis #3 it does not response. When you rotate axis #1 you can see axes #1 and #3 responses.

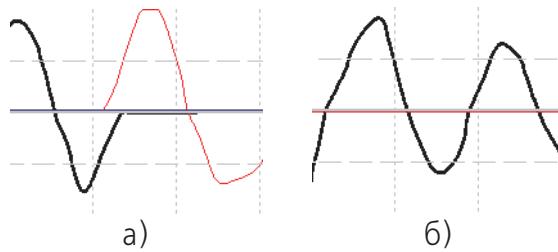


Fig. 4.36.

PAI OFF

Disables axes.

Specify the first disabled axis in **Source** field and number of disabled axes in **Num** field. For example **Source = 2**, **Num = 3**. If the button with PAI OFF function is pressed Axis #1 and axes with numbers over 4 will work. Axes #2, #3, #4 will be disabled.

4.3.14. Cyclic switch

Cyclic Switch

Description

Sequential single button pressing virtually presses some adjacent lines. Button mapping wizard dialog for Cyclic switch function is shown on Fig. 4.37.

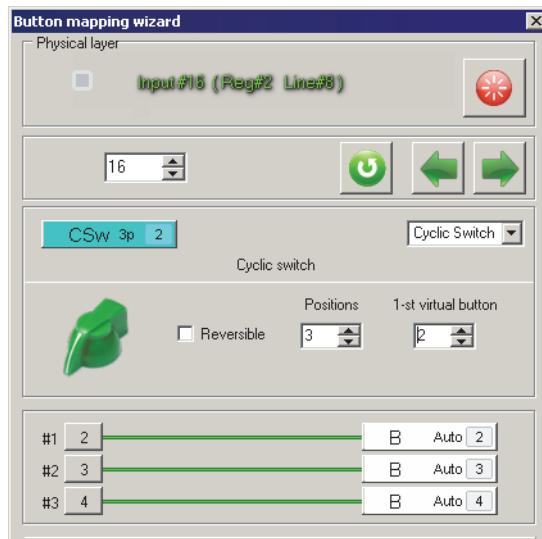


Fig. 4.37.

Positions counters sets virtual line number. **1-st virtual button** counter sets number of the first virtual line that will be pressed with the first pressing of cyclic switch button.

For example shown on Fig. 4.37 first press of button #16 (Start button on the right side of Fat Black Mamba case) will switch line # 2. The second – #3, the third – #4. Next press will switch line #2 again and so on. If **Reversible** is checked then lines will be switched in the following sequence: 2 3 4 3 2.

Virtual lines of Cyclic switch can use logical functions.

4.3.15. Trimmer

Trimmer

Description

Controls axes (physical or virtual) with buttons. Function modes:

- ▼ **Trimmer Reset** — Resets trimmer(s) to default condition. Returns axis with center to the central position and axis without center to zero. Also stores current axes trim value. It can be reapplied to axes using Trimmer Return function.
- ▼ **Trimmer Return** — Reapplies trim value, stored with Trimmer Reset function to selected axes.
- ▼ **Trimmer+, Trimmer-** — Trimming of existing axis or creation of virtual one. Axis response is changing until button is pressed. When you release button axis stops. + or - defines trimming direction.
- ▼ **Trimmer Auto+, Trimmer Auto-** — Alternative trimming. When you release button axis response falls to center or zero regarding to axis type. + or - defines trimming direction.
- ▼ **Trimmer SET+, Trimmer SET-** — Sets axis response to specified value.

Choose desired mode from **Function** combo box.

Trimmer Reset, Trimmer Return

Button mapping wizard dialog for Trimmer Reset function is shown on Fig. 4.38.



Fig. 4.38.

Check axis numbers that will be reset in **Applied axes** group. Axes 1, 2 and 8 will be reset in this example. Virtual axis # 8 (encoder as trimmer, see 3.5 on p. 32) is combined with axis #2. Single button will reset both axes simultaneously.

Global parameter Trimmer Time defines duration of trimmer reset process. If **Trimmer Time**=0, then trimmer reset will be instant. (Fig. 4.39, a). Fig. 4.39, b) shows trimmer reset if **Trimmer Time**=300.

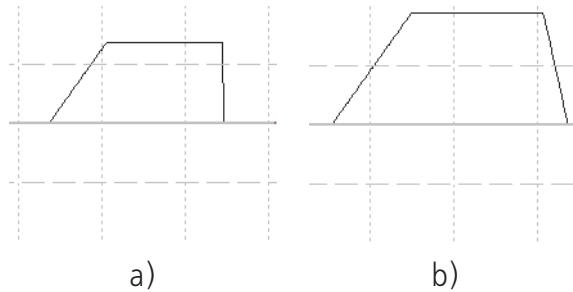


Fig. 4.39.

Button mapping wizard dialog for Trimmer Return function is similar to one for Trimmer Reset and is shown on Fig. 4.40.



Fig. 4.40.

Check axis numbers that will be retrimmed with values, stored while resetting with Trimmer Reset function in **Applied axes** group. Trimming of axes 1, 2 and 8 will be restored in this example.

Trimmer+, Trimmer-, Trimmer Auto+, Trimmer Auto-
Button mapping wizard dialog for these trimmers is shown on Fig. 4.41.



Fig. 4.41.

Signs of **Trimmer+**, **Trimmer-**, **Trimmer Auto+**, **Trimmer Auto-** specify trimming direction. Axis response for **Trimmer+** and **Trimmer-** will be fixed after button is released. Axis response for **Trimmer Auto+** and **Trimmer Auto-** will return to the center (axis with center) or zero (without center).

Choose trimmed axis number from **Axis** combo box. If there exists an axis with specified number it will be trimmed. If an axis does not exist it will be created. **Mul-**

tiplier combo box value specified response speed. This parameter is analogous to **Multiplier** for encoder-trimmer (see Analog trimmer on p. 56).

Trimmer SET+, Trimmer SET-

Button mapping wizard dialog for these trimmers is shown on Fig. 4.42. Signs of **Trimmer SET+** and **Trimmer SET-** specify trimming direction. After button press axis response will be equal to specified value.



Fig. 4.42.

Choose trimmed axis number from **Axis** combo box. Choose trimmed axis number from **Axis** combo box. If there exists an axis with specified number it will be trimmed. If an axis does not exist it will be created. Items of expanded combo box allow to specify response value.

Global parameters



In order to use listed functions choose **Trimmer+** or **Trimmer-** for desired axes from **Trimmer** combo box on **Profile — Common-n-Axes — Physical Axes** tab.



If function creates new axis check **En** and **Vs** for it on **Profile — Common-nAxes — Logical axes** tab. Set this axis as **Virtual** on **Physical Axes** tab.

4.3.16. Dynamic equalizer

Curves

Description

Allows temporary apply custom response curve (see 3.6 on p. 35) to chosen axes. This function is similar to **DR** (see DR on p. 63).

Button mapping wizard dialog for Curves is shown on Fig. 4.43.



Fig. 4.43.

Check customized axis numbers in **Applied axes** group. UNCHECK **Eq** for these axes on **Profile — Common-n-Axes — Physical Axes** tab.



If **Eq** is checked custom curve is applied to an axis permanently.

If **alternate action** is checked function works as a trigger. The first press enables custom mode and the second one disables it.

4.3.17. Toggle synchronizer

Sync

Description

When Sync button is pressed all lines of switched on toggles will generate pulses. For two state Toggle switch the pulse will be generated by switched on position (see 4.3.7 on p. 51).

Example. Fat King Cobra joystick has four toggles. Three of them are *On* and one *Off*. When game started it «does not know» about toggle states. Controls are not scanned automatically. After you press Sync button system will get current toggle states.

See also about three-way toggle switch features in Three-position (On-Off-On) Toggle switch features on p. 52.

Button mapping wizard dialog for Sync function is shown on Fig. 4.45.

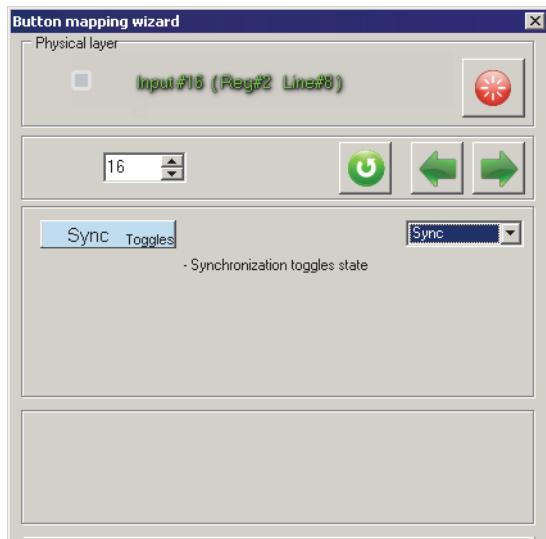


Fig. 4.45.

4.3.18. Button replica

RPB

Description

Enables virtual button press simultaneously with physical one. **Button mapping wizard** dialog for RPB is shown on Fig. 4.46.

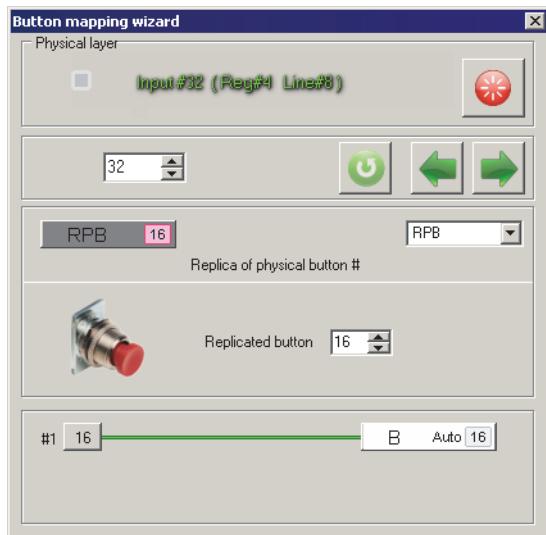


Fig. 4.46.

Choose physical button number that will be source for virtual using **Replicated button** counter.

For this example when you press Start button (left side of Fat Black Mamba case, line #16) line 32 will generate a pulse too. Line-replica can use logical functions (see Logical (output) function choice on p. 44).

4.3.19. Disable line

OFF

Description

Excludes line from controller processing. It can be useful if button, switch or other control is broken and generates unnecessary signals.

Button mapping wizard dialog for OFF function is shown on Fig. 4.47.



Fig. 4.47.

4.3.20. No function

NoF

Description

Disables any function for control. **Button mapping wizard** dialog for NoF function is shown on Fig. 4.48.

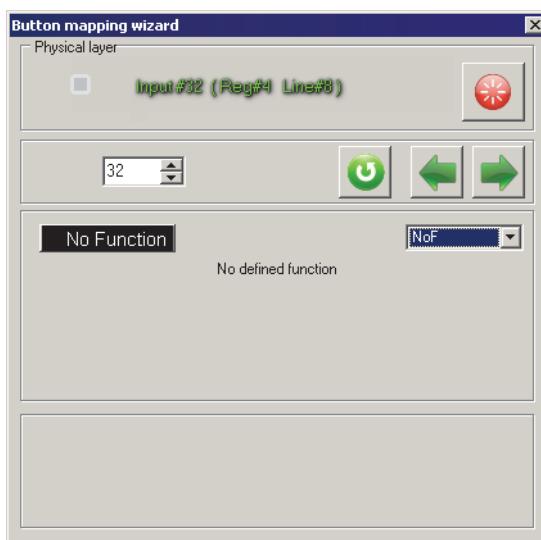


Fig. 4.48.

4.3.21. Boolean functions

Boolean

Description

Allow to control virtual button press using other buttons state. For example Eject button will work if both specified buttons will be pressed simultaneously only. Boolean functions can be connected to chains thus generating logical sequences.

Button mapping wizard dialog for Boolean function is shown on Fig. 4.49.

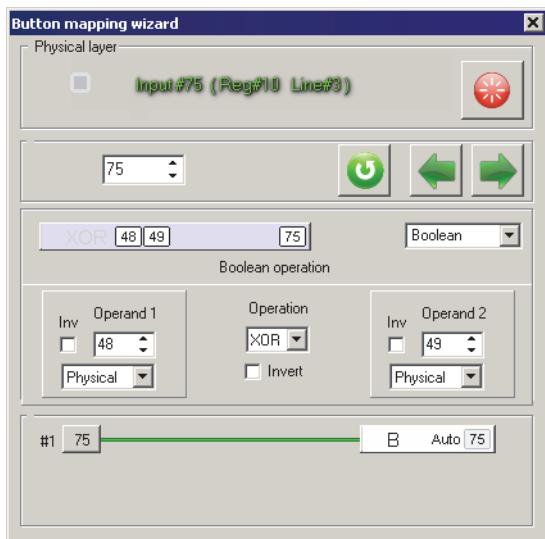


Fig. 4.49.

It is reasonable to assign target virtual button line number in range of lines not connected with physical control units, for this example #75.

Specify numbers of buttons that will control virtual one using **Operand 1** and **Operand 2** counters. **Inv** checkbox allows to invert input signal. If checked line will affect if is NOT pressed only. Items of combobox allow to select input signal type: physical button press, logical or virtual – the result of logical functions, Shift modifiers and so on.

Select Boolean function that will be applied to this line (virtual button), table 4.2, from **Operation** combobox.

Table. 4.2.

Function	Description
AND	Button «pressed» if both source buttons Operand 1 and Operand 2 are pressed.
OR	Button «pressed» if any of source buttons Operand 1 or Operand 2 is pressed.

Table. 4.2.

Function	Description
XOR	Button «pressed» if one of source buttons Operand 1 or Operand 2 IS pressed AND another IS NOT.
RS	RS-trigger. Button «pressed» if Operand 2 is pressed, Set input. Button «released» if Operand 1 is pressed, Reset input.
RT	RT-trigger. Button changes state (toggles) with every Operand 2 pressing. But this happens ONLY if Operand 1 is NOT pressed. If Operand 1 is pressed, button state will be unchanged regardless of Operand 1 pressings. If RT-trigger button was in «pressed» state when Operand 1 was pressed, then its state will be changed to «released».
CMP	Comparator. Forces line actuation if axis response is greater or equal to specified value.
JMP	Jumper. Maps logical button line to physical one.

CMP

Line will be actuated when axis response value (**Operand 1**) becomes equal or greater to specified value (**Operand 2**), in percents of full response range. It is recommended to use **Virtual** or **Logical** axis type. For **Physical** or **Virtual** types, which are bipolar, **Inv** checkbox allows to select response direction. For **Logical** type this parameter is ignored. Fig. 4.50 shows an example of function parameters.

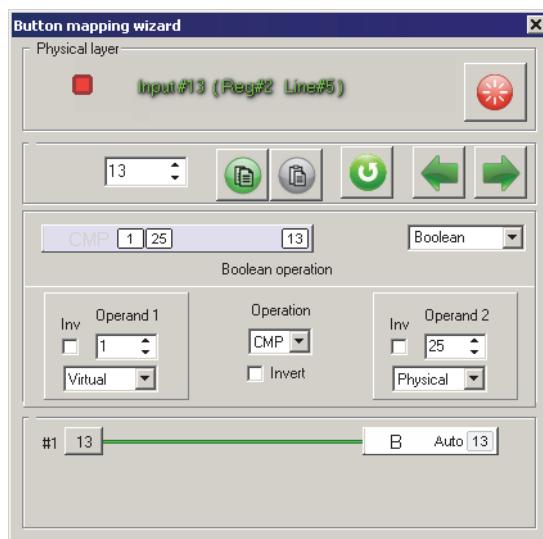


Fig. 4.50.

Fig. 4.51 shows an example of function work.

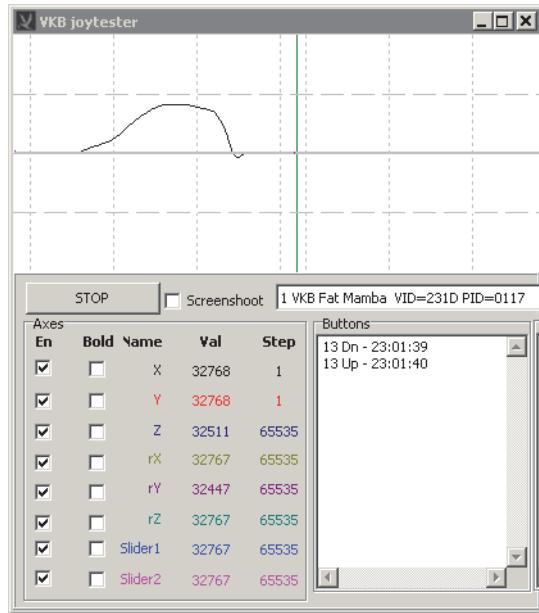


Fig. 4.51.

Fig. 4.52 shows an example of function work if **inv** for **Operand 2** is checked.

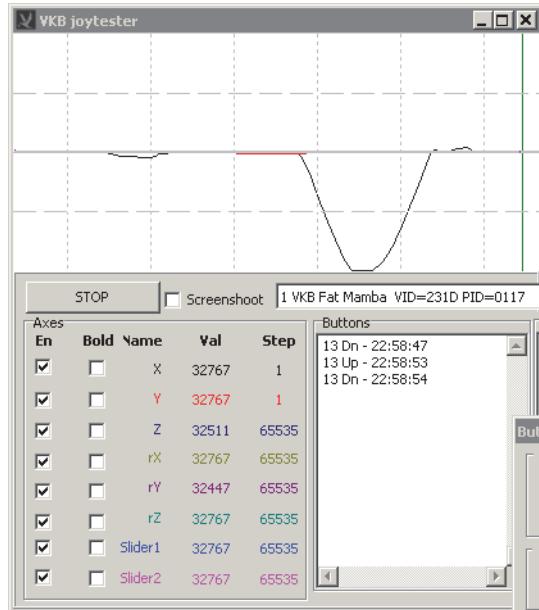


Fig. 4.52.

JMP

By default logical layer button lines can use restricted function set: button, keystroke mapping, HAT, macro launch etc. (Fig. 4.53).

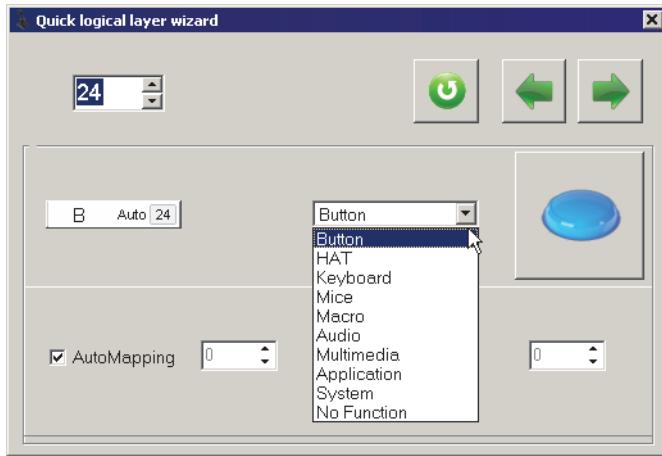


Fig. 4.53.

Generators, trimmers, encoders and a lot of other useful functions are enabled for physical layer lines only. Thus you can not assign such function to line that will act when you press button with Shift modifier.

Jumper function allows to ignore these restrictions. It maps logical line to physical layer.

Button mapping wizard dialog for Jumper function is shown on Fig. 4.54.

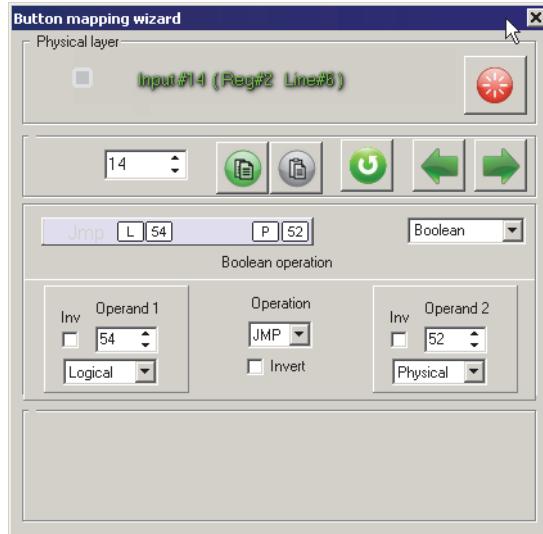


Fig. 4.54.

Set logical layer line number as **Operand 1**. Set mapped physical line number as **Operand 2**.

Example.

If you press Flaps toggle switch on back side of Fat Black Mamba case (line 13) together with Shift modifier, logical line 54 will be actuated (Fig. 4.55).

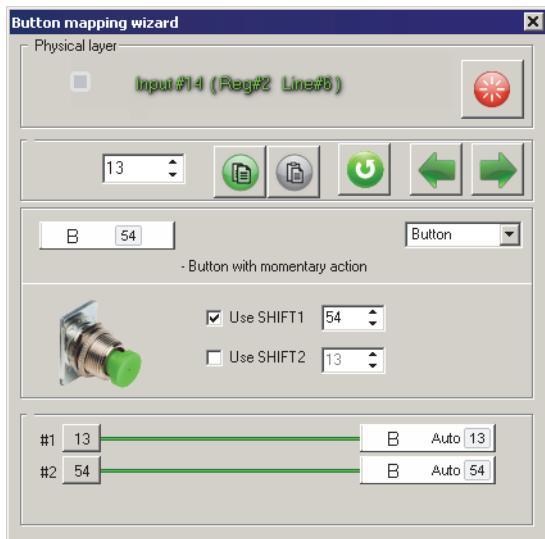


Fig. 4.55.

Jumper function with parameters shown on Fig. 4.54, maps logical line 54 to physical 52. Trimmer Auto+ function is assigned to this **physical** line (Fig. 4.56).



Fig. 4.56.

Thus Jumper allows toggle switch modified with Shift to trim an axis!

4.3.22. Selector, radio button

RadioButton

Description

Radio button allows to select only one line from specified group.

Button mapping wizard dialog for Radiobutton function is shown on Fig. 4.57.

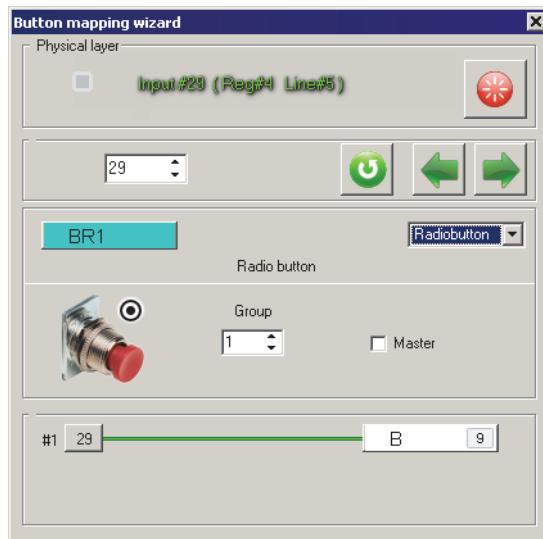


Fig. 4.57.

Set number of the group, to that belongs this button, using **Group** counter. If no group with this number exists, it will be created. Check **Master** to use this button as default. It will be «pressed» automatically on joystick start. If there are several master buttons in a group, only last assigned will be work as master.

You can assign logical functions to Radiobutton (see Logical (output) function choice on p. 44).

Example

Gladiator family joysticks have only one trigger. You can create a group of buttons, that will directly assign specific weapon to trigger. The first button allows machine-gun, the second – gun and the third, Master, i.e. default button, safety lock.

Assign weapon #1 toggle. Open **Physical Layer** tab, click desired cell, for example #48. Assign **RadioButton** function to it in group #1. Assign weapon #2 toggle for cell #49.

Assign safety lock for cell #50 in the same group and check **Master** in **Button Master wizard** dialog. Set logical function No function for this cell on **Logical layer** tab. By default your weapons will be locked.

4.3.23. Relative axes control

RelAxes

Description

This function allows to set relative axis (see 3.4 on p. 31) response value. **Button mapping wizard** dialog for RelAxes function is shown on Fig. 4.58.



Fig. 4.58.

Select function mode from **RelAxes Function** combobox.

- ▼ **Set Value** allows to set response axis value equal to **FA3 val** (see 3.3 on p. 30) parameter.
- ▼ **RESET** allows to reset response axis value.

Check applied axis numbers in **Applied to axes** group.

4.3.24. Microstick mode switch

uStick Switch

Description

This function allows to switch microstick modes. **Button mapping wizard** dialog for RelAxes function is shown on Fig. 4.59.



Fig. 4.59.

Select microstick number using **POV N** counter. You can switch microstick modes using several manners. They are listed in Table 4.3

Table. 4.3.

Name	Description
Button	Switch as a simple button.
ButtonAlt	Switch as a button with fixation (see 4.3.2 on p. 47).
Tempo	Microstick mode is specified by button pressing duration (see 4.3.11 on p. 61). Assign default (on joystick start) microstick mode using POV mode on start checkbox. If unchecked microstick works as a discrete HAT.
SHIFT	Microstick mode is specified by SHIFT modifier. Select SHIFT number using SHIFT N counter.
SubShift	Microstick mode is specified by SubSHIFT modifier. Select SubSHIFT number using SubSHIFT N counter.

Chapter 5. Logical button functions

5.1. Overview

Each of joystick control is connected to controller by single (button, single-state toggle switch) or several (encoder, HAT, Two-state toggle switch) lines. Physically line corresponds to pair of conductors with a specific number. When you press button its line generates a signal. When you rotate encoder wheel in one direction you get a series of its first line pulses. Another direction generates pulses of another line with number greater (or less) by one. Physical line signal is received by controller. But operation system and the game will receive just logical signal. By default if no logical function is applied, line numbers will be the same. Logical buttons engine executes the following tasks:

- ▼ remap control lines,
- ▼ control multimedia, use operation system functions, launch applications, work with virtual mouse and so on with use joystick controls,
- ▼ map joystick buttons to keystrokes.

5.2. Logical function setup modes

You can obtain access to logical function parameters from **Button mapping wizard** dialog on **Physical layer** tab or directly on **Logical layer** tab.

5.2.1. Access from Physical layer tab

When you set up physical function it can use logical function too. For example simple button or toggle switch can be mapped to keystroke or mouse button or even axis or wheel.



Some physical functions have no access to logical functions, Shift for example.

If physical function has access to logical one corresponding control items are accessible in **Button mapping wizard** dialog. For example **Button mapping wizard** dialog for simple button (*Button*) is shown on Fig. 5.4. It appears after you click button line number cell on **Profile — Buttons — Physical layer** tab.

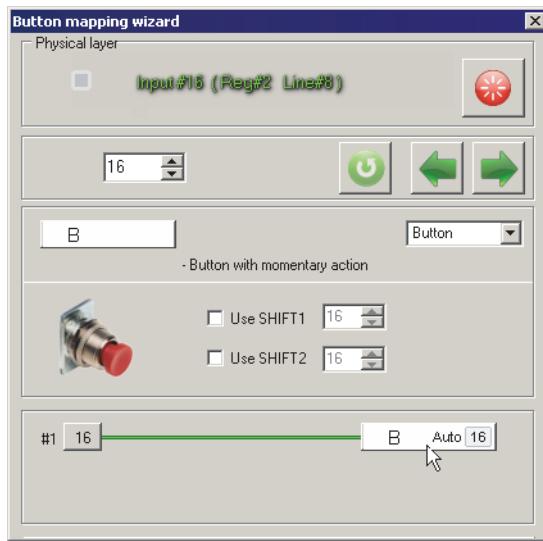


Fig. 5.1.

Line #16 is customized. For Fat Black Mamba joystick it corresponds to **Start** button on the right side of joystick case. By default logical line number will be the same with physical one i.e. 16. In order to apply logical function click logical function sign as shown on a picture. Dialog view will change. Control items for logical function parameters will appear (Fig. 5.2).

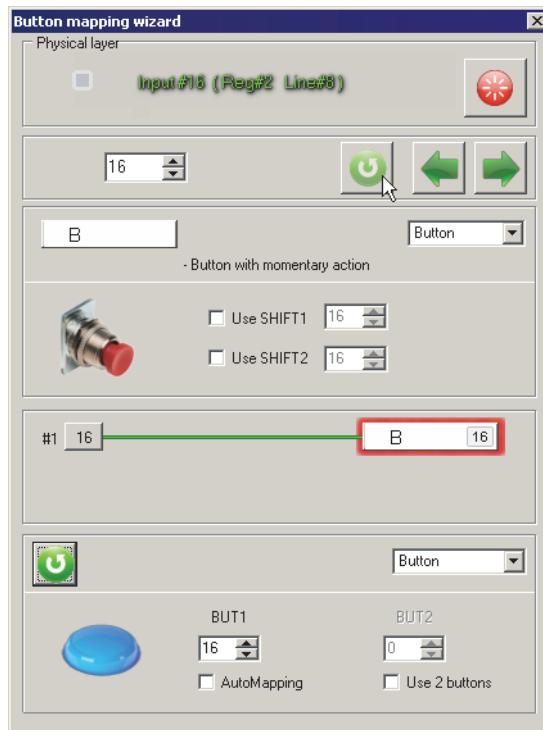


Fig. 5.2.

5.2.2. Access from Logical layer tab

In order to access logical function settings you can open **Profile — Buttons — Logical layer** tab and click the cell with number of desired line. **Quick logical layer wizard** dialog will appear (Fig. 5.3).

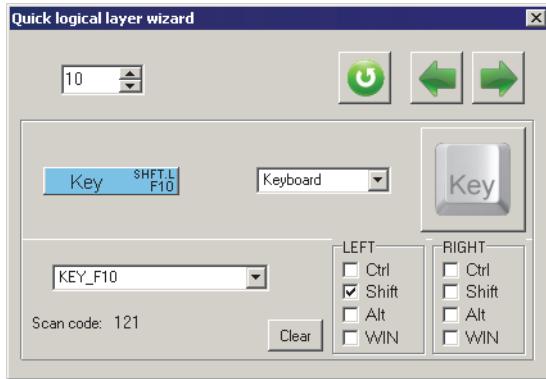


Fig. 5.3.

5.2.3. Function selection

Work with both dialogs is similar. You can select function from combo box (Fig. 5.4).



Fig. 5.4.

See brief function descriptions in table 5.1.

Table. 5.1.

Function name	Description
Button	Simple button.
HAT	HAT switch.
Keyboard	Virtual keyboard.
Mice	Virtual mouse.
Macro	Using macro.
Audio	Audio application control.
Multimedia	Multimedia application control.
Application	Launch applications.

Table. 5.1.

Function name	Description
System	System functions execution.
No Function	Logical functions disable.



Be careful to use **System** function. Improper use can cause operation system malfunction.

5.3. Virtual buttons

5.3.1. Overview

Virtual buttons engine allows to remap button numbers. By default button logical number (recognized by OS) is the same with physical one (specified by wiring). **Quick logical layer wizard** dialog is shown on Fig. 5.5.

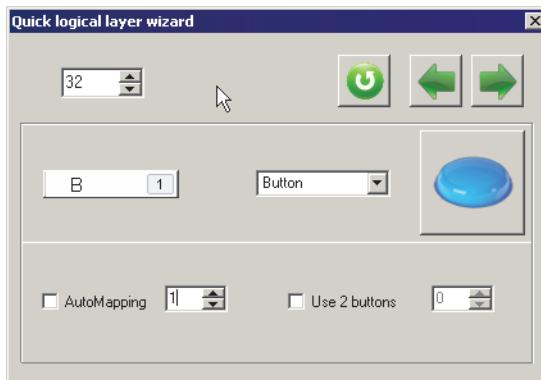


Fig. 5.5.

In order to remap default logical button number uncheck **AutoMapping** and assign number using counter.

5.3.2. Free line choice

When you remap line number you must know that new line number is not occupied. Click line number counter. **Logical layer** dialog appears (Fig. 5.7). Occupied lines are red but free – black. Click line cell to choose its number.

Logical layer							
1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24
25	26	27	28	29	30	31	32
33	34	35	36	37	38	39	40
41	42	43	44	45	46	47	48
49	50	51	52	53	54	55	56
57	58	59	60	61	62	63	64
65	66	67	68	69	70	71	72
73	74	75	76	77	78	79	80
81	82	83	84	85	86	87	88
89	90	91	92	93	94	95	96
97	98	99	100	101	102	103	104
105	106	107	108	109	110	111	112
113	114	115	116	117	118	119	120
121	122	123	124	125	126	127	128

Fig. 5.7.

Using remap engine you can make button mapping more useful. For example the first trigger of Warthog grip on Fat Black Mamba case has physical (and by default logical) number 32. Usually this trigger works very often – to control weapon. It is reasonable to remap its number to #1. This example is shown on Fig. 5.5. You can remap the second trigger line number from 25 to 2 similarly.

If you use encoder as analogue trimmer its two lines are not used. For Mamba family the first encoder physically occupies lines #5 and #6. You can fearlessly use these lines for own purposes. If you want to use default mapping check **AutoMapping**. If you map several physical buttons to the same logical line it will be activated by any of them.

5.3.3. Simultaneously button activation

If you want to activate two logical lines when press single button check **Use 2 buttons** and assign second line number.

5.4. Keyboard mapping

5.4.1. Overview

Keyboard item allows to map button to keystroke. **Quick logical layer wizard** dialog for this function is shown on Fig. 5.8.

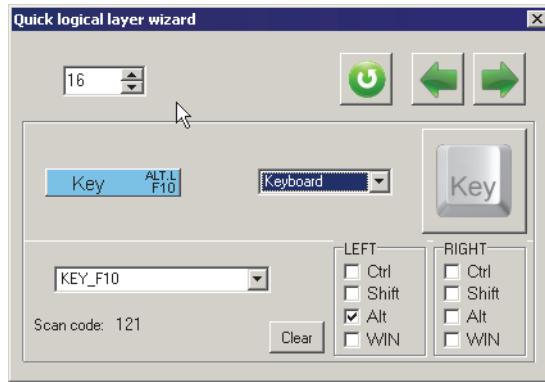


Fig. 5.8.

5.4.2. Keystroke assignment

You can assign single keystroke to button pressing physical key or choose it from combo box.



Some keystrokes for example functional keys can be assigned from combo box only.

Chosen keystroke will appear in combo box, In addition you will see its scancode.



When you work with keystroke mapping note that any key press will affect this function. Use mouse only to control process unless you really assign keystroke.

5.4.3. Keyboard modifiers

You can use keyboard modifiers *Ctrl*, *Alt*, *Shift*, *Win*. Right and left modifiers are distinct. You can use modifiers pressing physical keys or checking corresponding checkboxes. Simultaneously modifiers use (RCtrl+RShift+A) is allowed.

5.4.4. Mapping completion



In order to complete keystroke mapping and go to the next line processing press **Previous** or **Next** button. **Clear** button allows to cancel all current settings change.

5.5. Mouse control

5.5.1. Overview

Mice item allows you to control mouse axes, scroll wheel and buttons using joystick buttons.

5.5.2. Mouse buttons

Quick logical layer wizard dialog for this function is shown on Fig. 5.9.

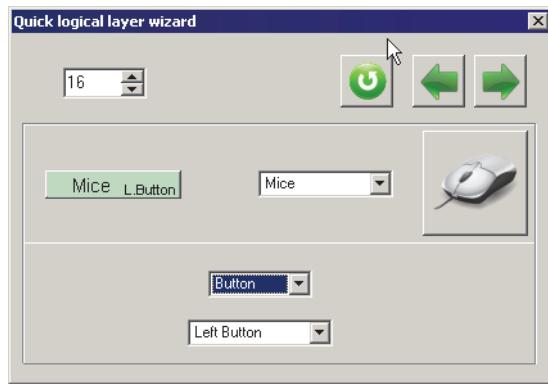


Fig. 5.9.

In order to control mouse buttons choose **Button** item.

Button type — left, right etc. — choose from combo box. **Mice On/Off** item allows to switch mouse control. You MUST assign this function to one of buttons if **On/Off** item from **Active** combo box was chosen in **Mouse** group on **Global — Common** tab (see 2.4.11 on p. 20). If **Absolute** mouse type was chosen then **Set center point** item will place mouse cursor to screen center.

5.5.3. Mouse axes control

Axis item (Fig. 5.10) allows to control mouse axis using button. You can choose mouse axis — **X** or **Y**, or mouse **Wheel**. Assign direction — **Up** or **Down** and velocity multiplier. If multiplier is equal to zero, cursor autoacceleration will be used.

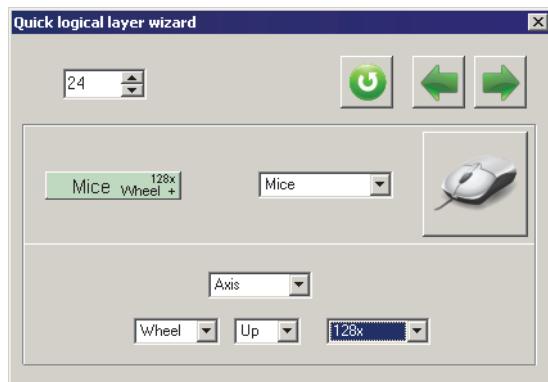


Fig. 5.10.

5.6. Macro

5.6.1. Overview

Macro is a named keystroke combination saved in a file that can be called by single button press. See Chapter 8 on p. 97 how to prepare macro files.

Macro item allows you to launch macro using joystick buttons.

5.6.2. Macro assignment

Quick logical layer wizard dialog for this function is shown on Fig. 5.11.

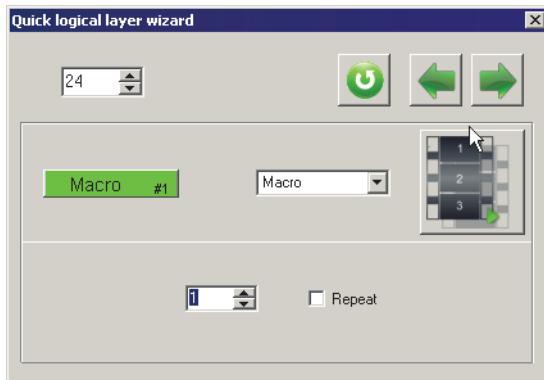


Fig. 5.11.

Set macro number using counter. If you want to automatically repeat macro if its button stays pressed at macro end check **Repeat**. If unchecked you must restart macro manually.



You **MUST** set macro parameters and **SAVE** it on **Macro** tab BEFORE Macro function assigning to a button.

5.7. Sound control

5.7.1. Overview

Audio item allows you to control computer audio using joystick buttons.

5.7.2. Function setup

Quick logical layer wizard dialog for this function is shown on Fig. 5.12.



Fig. 5.12.

Select specific function (mute, volume increment and so on) for current button from **Audio control** combo box.

5.8. Multimedia control

5.8.1. Overview

Multimedia item allows you to control computer multimedia using joystick buttons.

5.8.2. Function setup

Quick logical layer wizard dialog for this function is shown on Fig. 5.13.



Fig. 5.13.

Select specific function (mute, volume increment and so on) for current button from **Multimedia control** combo box.

5.9. Application launch

5.9.1. Overview

Application item allows you to launch default applications for example e-mail client, word processor etc. using joystick buttons.

5.9.2. Function setup

Quick logical layer wizard dialog for this function is shown on Fig. 5.14.



Fig. 5.14.

Select specific function (mute, volume increment and so on) for current button from **Application control** combo box.

5.10. System function control

5.10.1. Overview

System item allows you to execute some system functions such as power down, sleep etc.



Be careful using this function! Improper use can cause operation system malfunction.

5.10.2. Function setup

Quick logical layer wizard dialog for this function is shown on Fig. 5.15.

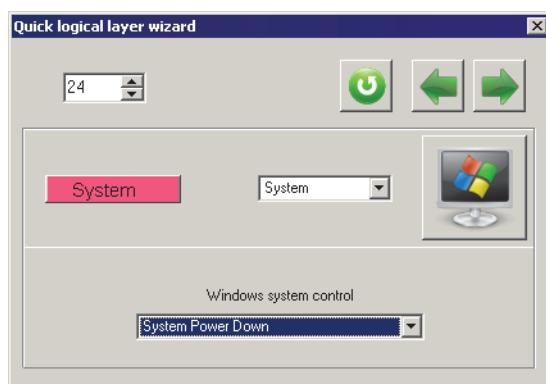


Fig. 5.15.

Select specific function (mute, volume increment and so on) for current button from **Windows system control** combo box.

5.11. Button deactivation

No Function item allows to deactivate button.

Chapter 6.HAT/POV parameters

6.1. Overview

Joystick can have up to four HATs. Physically discrete HAT is four-position switch. It consists of four pushbutton switches with shaft. There can be additional axis push button. HAT uses four lines. Analogue HAT is two-axes microstick. It can have push button too. Using NJoy32 controller you can configure POV#1 and POV#2 as analogue as well as discrete HATs. POV#3 and POV#4 can be configured as discrete devices only. Control units of **POVs** tab (Fig. 6.1) allow to configure POV#1 and POV#2.

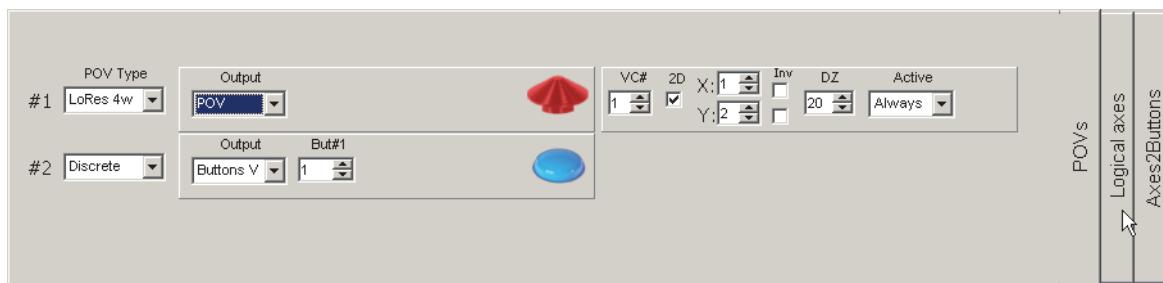


Fig. 6.1.

6.2. Microstick modes

Select microstick mode from **POV Type** combobox (Table. 6.1).

Table. 6.1.

Name	Description
Discrete	Standard discrete HAT. Detailed description of this kind of devices you can find in section 4.3.9 on p. 58.
LoRes 4W	4-way low resolution HAT.
LoRes 8W	8-way low resolution HAT.
HiResPOV	High resolution HAT. Not used in games at present time().

6.3. Output mode

All microstick modes except **HiResPOV** can produce several types of output. Select desired output from **Output** combobox (Table. 6.2).

Table. 6.2.

Name	Description
POV	HAT. Point of View.
Buttons V	Logical buttons set.

Table. 6.2.

Name	Description
Buttons L	Virtual buttons set.
Numpad	Numpad buttons.

6.3.1. POV

Microstick is represented as POV switch.

6.3.2. Virtual/Logical buttons

Microstick is represented as a set of buttons of corresponding level. Button number depends on microstick mode, **LoRes 8W** or **LoRes 4W**. Assign first button number of this set using **But#1** counter (Fig. 6.2).



Fig. 6.2.

Other buttons will have next numbers. **@once** checkbox allows to use diagonal microstick pressing. If it is checked both buttons will be pressed simultaneously.

6.3.3. Numpad

Microstick works as numpad keys. Additional control units are enabled for this mode (Fig. 6.3).



Fig. 6.3.

When microstick is in the center *Numpad5* key can automatically be pressed. Select **Num5** item from **Center** combobox to enable this action. By default NoFunction logical function is assigned to *Numpad5* key. You can map a keystroke to it. To do so click rectangle with default function name. **Quick logical layer wizard** dialog appears (Fig. 6.4).

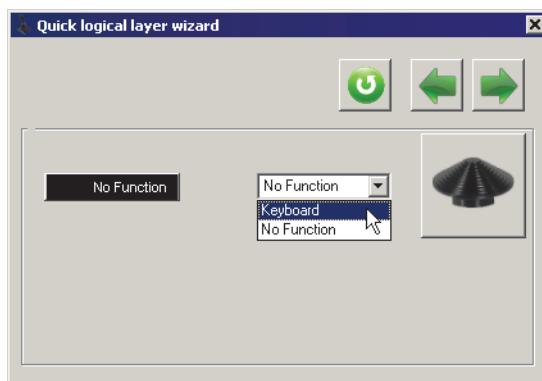


Fig. 6.4.

Keystroke mapping is described in section 5.4 on p. 86.

 You must ENABLE keystroke mapping (see 2.4.9 on p. 19).

If mapping is disabled but you have decided to use microstick as numpad warning message appears (Fig. 6.5).



Fig. 6.5.

6.4. Microstick axes binding

If you selected **LoRes 8W** or **LoRes 4W** microstick mode, you must bind it to joystick axes using control units, shown on Fig. 6.6.



Fig. 6.6.

 You can bind microstick to ANY joystick axes similarly to virtual mouse (see 2.4.11 on p. 20). If you want to know what physical axes numbers uses microstick in fact, open **Test** tab, move microstick and see its response (see 10.1.2 on p. 107).

Control units functionality is shown in Table 6.3.

Table 6.3.

Name	Description
VC#	Virtual controller number.
2D	If checked microstick has two axes binded to pair of orthogonal axes. If unchecked microstick has single axis.
X,Y	Counters allowing to assign joystick axes numbers binded to X and Y microstick axes.
Inv	Axes inversion.
DZ	Deadzone size in percents of full response range. Specifies button pressing treshold for LoRes 8W or LoRes 4W modes or deadzone for HiResPOV .
Active	Microstick activity mode. If Always mode selected it is active permanently. If On/Off you must assign button to control microstick (see 4.3.24 on p. 80).

Chapter 7. Group button assignments

Srv Some settings can be applied to several buttons simultaneously. Press **Srv** button on **Profile — Buttons — Physical layer** or **Logical layer** tab to make group assignments. **Physical layer** dialog (Fig. 7.1) appears.

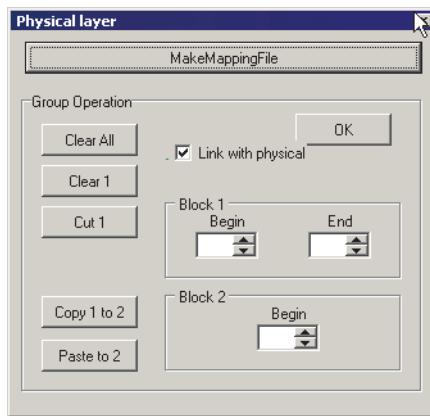


Fig. 7.1.

If **Srv** button was pressed on **Physical layer** tab, there will be **Link with logical** checkbox and if button was pressed on **Logical layer** tab — **Link with physical**. These control items are similar and allow to link buttons with the same line numbers within group operations.

7.1. Button reset

Clear all button allows to reset all buttons. As a result the following actions will be executed:

- ▼ simple button function will be assigned to all lines,
- ▼ *Shift* modifiers will be cancelled,
- ▼ logical button assignments will be cancelled,
- ▼ Keystroke mapping will be cancelled etc.

7.2. Reset specified button range

Clear1 button allows to reset specified button range. Counters **Begin** and **End** in **Block 1** group (Fig. 7.1) specify range limits.

7.3. Using clipboard

You can use button clipboard for group operations. This clipboard stores functions of specified button range.

7.3.1. Cut

Cut 1 button allows to cut specified button range. Counters **Begin** and **End** in **Block 1** group (Fig. 7.1) specify range limits.

As a result the following actions will be executed:

- ▼ buttons of this range will be reset,
- ▼ current functions will be stored in a clipboard,
- ▼ buttons laying after range end will be remapped to range start.

7.3.2. Paste

Paste to 2 button allows to paste lines stored in a clipboard from line number specified in **Begin** field of **Block2** group. Current button assignments (if any) will be lost.

7.3.3. Copy and paste

Copy 1 to 2 allows to copy specified button range to clipboard (counters **Begin** and **End** in **Block 1** group specify range limits) and paste this buttons from line number specified in **Begin** field of **Block2** group. Current button assignments (if any) will be lost.

7.4. Button functions report

MakeMappingFile button allows to create button functions report. See detailed information of how to prepare report in 9.6 on p. 105.

7.5. Group operations finish

All results of group operations are applied immediately. Control dialog stays open. In order to finish group operations press **OK** button.

Chapter 8.Macro setup

8.1. Overview

Macro can be described as a named sequence of logical button actions i.e. simple button press, keystrokes and so on. Each action or macro element is named as **point**. By default macro consists of four points. You can concatenate several macros to increase points total. Each single macro can have specific timing – whole point duration and a part of this time in which virtual button stays pressed.

8.2. Macro parameters

8.2.1. Overview

Control items of **Macro** tab (Fig. 8.1) allow to set up macro parameters.

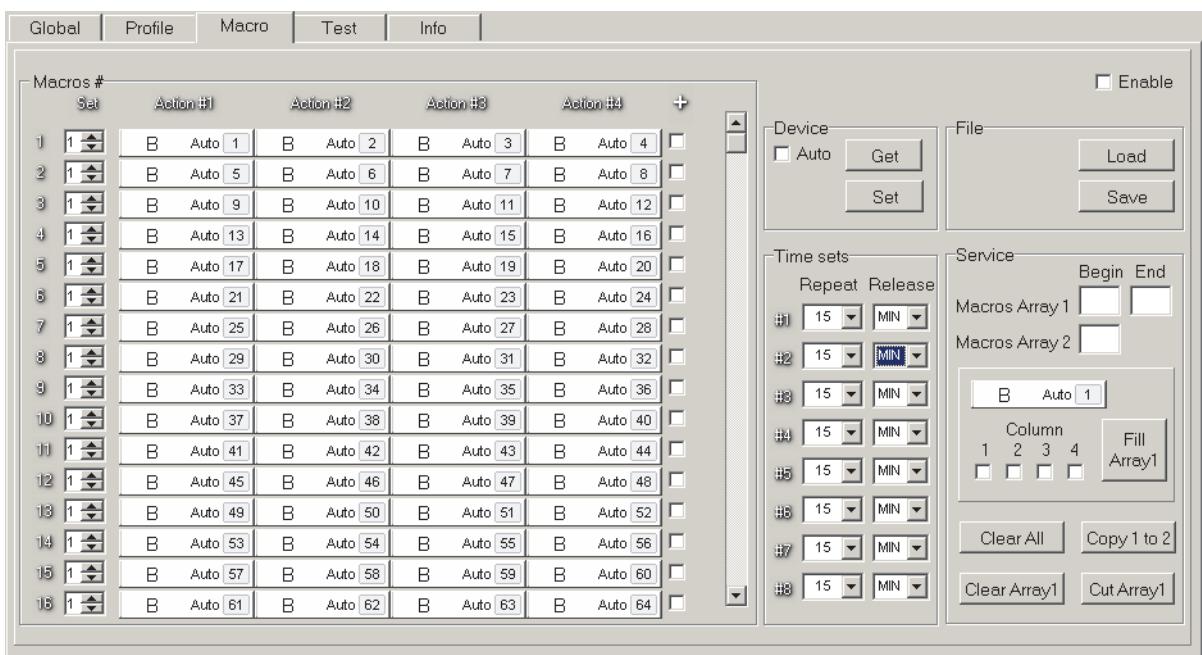


Fig. 8.1.

Each macro has its own number – up to 118. Number of the macro is its name. This parameter must be specified when you set up macro function (see 5.6 on p. 88).

8.2.2. Point parameters

In order to set up point parameters click its cell. **Quick logical layer wizard** (Fig. 8.2) will appear.

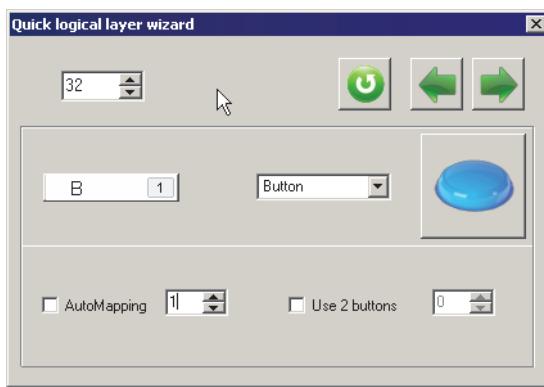


Fig. 8.2.

Each point is a logical button function. You can find detailed description of these functions in Chapter 8 on p. 97.

Check **Continued macro** to append **next** macro to current one. You can append not only next macro but one with specific number. In this case assign **Macro** function to the last point of current macro and set desired number for it (Fig. 8.3).

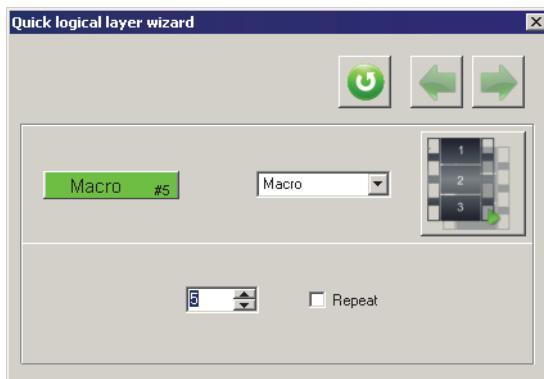


Fig. 8.3.

8.3. Macro timing

Control items of **Time sets** group allow to set up macro timings. Eight time sets can be used. Choose point duration time (15 ... 1000 ms) from **Repeat** combo box. Choose duration of virtual button pulse from **Release** combo box (table 8.1).

Table. 8.1.

Release type	Pulse duration
MAX	Repeat value-8 ms.
1:4	0,25 of Repeat value.
1:2	0,5 of Repeat value.
MIN	8 ms

You can specify up to 8 different time sets and assign them to a macro using **Set** counter.

8.4. Operations with macro

After you have completed macro setup press **Set** button in **Device** group to load current parameters to controller. **Get** button allows to read parameters from controller.

Save button allows to save current macro parameters to file with *mcr* extension. **Load** button allows to read parameters from file. Do not forget to press Set button to load parameters to controller!

In order to let your macro work check **Enable**.

8.5. Group operations

Some settings can be applied to several macros and points simultaneously. Use control items of **Service** group for it (Fig. 8.4).

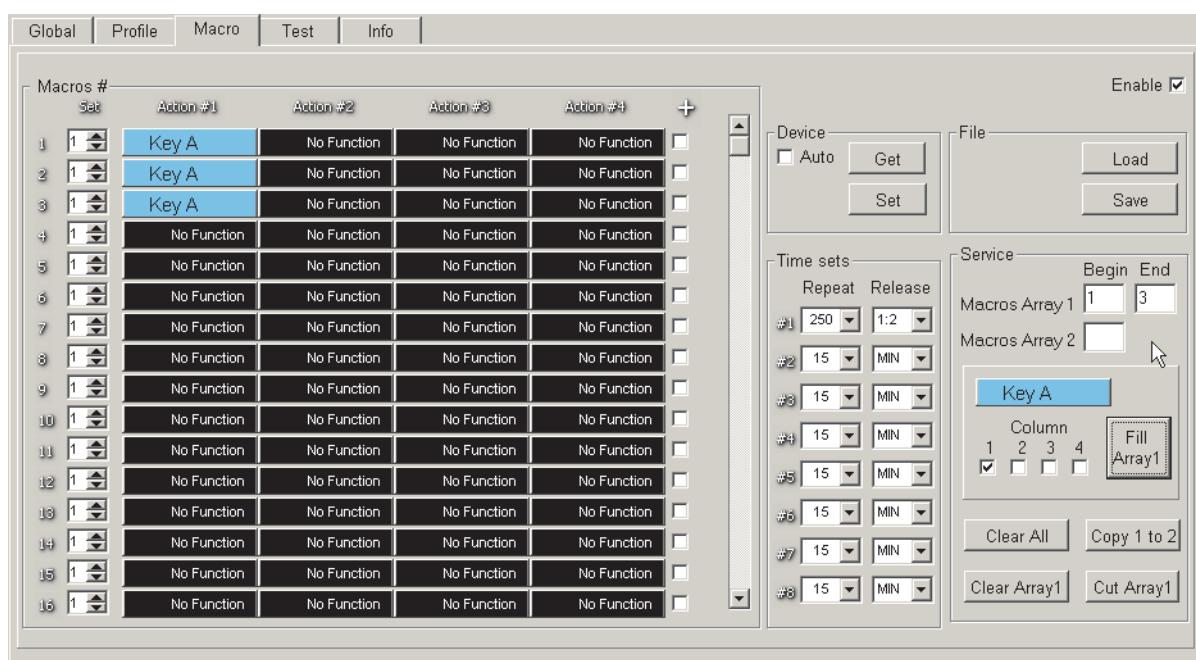


Fig. 8.4.

8.6. Point group clearing

Clear all button in **Service** group allows to reset all points of all macros.

Clear Array1 button allows to reset specified macro range. Counters **Begin** and **End** in **Macros Array1** group (Fig. 8.4) specify range limits.

8.7. Filling point array

You can fill point array with the same functions. For example Action#1 column of macros 1...2 is filled with A keystroke on Fig. 8.4. Click logical button cell (Fig. 8.5) and assign desired function in **Quick logical layer wizard** dialog that will appear.

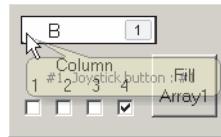


Fig. 8.5.

See detailed description of logical functions in Chapter 5 on p. 82.

Set macro range limits using **Begin** and **End** counters in **Macros Array1** group **Macros Array1** and column range limit using **Column** checkboxes, then press **Fill array1** button.

8.8. Using clipboard

Copy 1 to 2 allows to copy specified macro range to clipboard (counters **Begin** and **End** in **Macros Array 1** group specify range limits) and paste this macros from macro number specified in **Macros Array 2** field. Current macro assignments will be lost.

Chapter 9. Service functions

9.1. Loading parameters

You **must** press **Set** button to load current parameters into controller memory and apply them.

9.1.1. Forced loading

Versions of controller firmware and configuration tool must correspond. Otherwise some functions can malfunction. Profiles i.e. parameter sets also must correspond to firmware version. In some cases it is better to reassign all axes and buttons all over again. By default loading nonmatching profiles is forbidden. But if you want to load parameters anyway, for your own risk, edit configuration file *zconfig.ini* saved in the same folder that *VKBDevCfg.exe*. Add *ForcedWriteID=1* string to *[User]* section, save this file and restart *VKBDevCfg.exe*. You will be able to load any profiles regardless of versions. If profile does not match to firmware you will see warning message (Fig. 9.1).

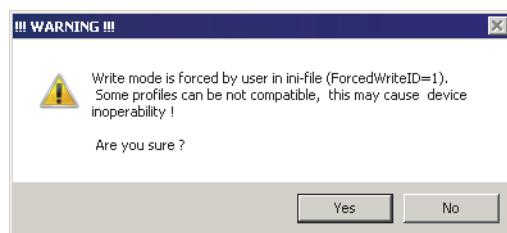


Fig. 9.1.

You must confirm or cancel loading using message buttons.

9.1.2. Partial parameter loading

Add *PartialWrite=1* string to *[User]* section of *zconfig.ini* file and you will be able to load parameter set partially. For example you want to reassign button mapping only.

After you press **Set** button **Partial write settings** dialog will appear (Fig. 9.2).

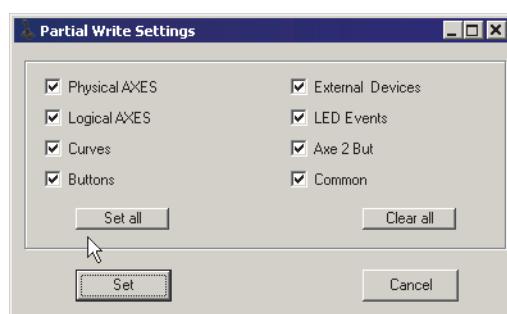


Fig. 9.2.

Check parameter names that will be loaded to controller. **Set all** and **Clear all** buttons allow corresponding choices. Press **Set** button to complete loading. **Cancel** button allows to cancel loading.

9.2. Current controller parameters

Get button allows to retrieve current controller parameters.



No matter what tabs of configuration tool are open. The whole parameter set will be retrieved.

If you have made some parameter changes and then decided not to load them to controller you can simply press **Get** button. It is possible only if you have not pressed **Set** button before.

9.3. Saving profile

You can save current profile, i.e. parameter set to file. To do so press **Save** button and choose folder and enter file name. By default file will have *cfg* extension.

9.4. Loading profile

9.4.1. Load button using

Saved profile can be loaded into controller memory. Press **Load** button, open folder containing profile and choose file with *cfg* extension.

9.4.2. Drag-n-drop using

Using VKBDevCfg.exe starting with 0.85.06 version you can use drag-n-drop to load profile from file. Simply drag file name from Windows explorer to configurator window and drop it. If **Set After Load** on **Settings** tab is checked then parameters will be saved to controller memory automatically. Otherwise you must press **Set** button as usual.

9.5. Profile switch on-the-fly

9.5.1. Overview

Controller memory can store up to eight profiles. You can switch these profiles without controller restart. Instead of loading profile using **Load** command (see 9.4 on p. 102) the following physical level parameters cannot be changed:

- ▼ SPI, USART ports, LED,
- ▼ axis sensor types (DMARS, AMARS, analogue etc.),

- ▼ number of buttons, HATs, axes (so it is recommended to specify maximal number always).

The following parameters CAN be changed:

- ▼ button register number,
- ▼ button matrix parameters,
- ▼ external devices connected via BUS parameters,
- ▼ button physical and logical functions,

Calibration parameters **KdHi**, **KdLo**, **BIAS**, **Base**, **Dir** (see 3.2.1 on p. 27), are the same for all profiles.

Use profile switch utility saved in *zSwitch.exe* file. *zSwitch.ini* file contains basic utility settings. *zSwitch* stays in computer memory after being launched and allows to switch profiles on-the-fly without *VKBDevConfig.exe*.

9.5.2. Saving profile into the clipboard

Preparing *zconfig.ini*

Append strings describing profiles into *[User]* section of *zconfig.ini* configuration file.

Example of description.

[User]

User=Developer

Profile 1=test profile #1

Profile 2=test profile #2

Profile 3=test profile #3

User=Developer is necessary can be already appended to allow macro, LEDs etc. Profile numbering must begin from 1.

Preparing *zswitch.ini*

Append strings describing profiles into *[User]* section of *zswitch.ini* configuration file similarly to *zconfig.ini*.

Example of description.

[User]

Profile 1=test profile #1

Profile 2=test profile #2

Profile 3=test profile #3

Saving profiles into the clipboard

Launch *VKBDevConfig.exe*. Create profile. Press and hold *<RightCtrl>*, click **Set** button. **Profile#** dialog will appear (Fig. 9.3).

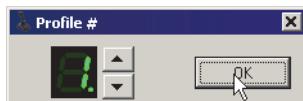


Fig. 9.3.

Choose number of loading profile and press **OK** button. Current profile will be saved into controller clipboard but not activated. Current profile stays active. Create another one profile and repeat saving procedure, choosing another number. Number of thus saved profiles must correspond to described in configuration files. For given example you can save up to 3 profiles.

Loading profile from the clipboard

In order to load profile from controller clipboard press and hold *<RightCtrl>* click **Get** button. **Profile#** dialog will appear (Fig. 9.3 on p. 103). Choose profile from the list and press **OK** button. Chosen profile will be loaded to controller memory. New parameters will appear in configuration utility control items. Press Set button to activate loaded profile.

Switching profiles without configuration utility

Launch *zSwitch.exe*. Program window will appear (Fig. 9.4).



Fig. 9.4.

You can choose profile using mouse cursor (Fig. 9.5).

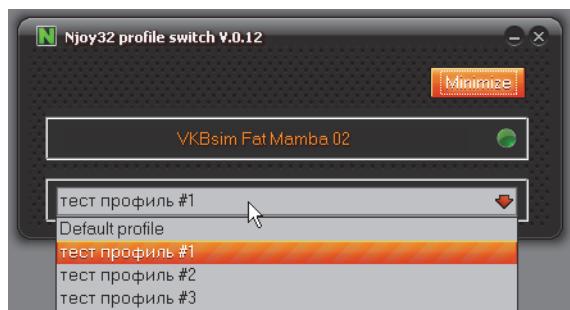


Fig. 9.5.

Minimize button allows to minimize this window to tray icon (Fig. 9.6).



Fig. 9.6.

In order to load profile click this icon with right mouse button. Profile menu will appear (Fig. 9.7).



Fig. 9.7.

Click desired profile with left mouse button. Chosen profile will be loaded into controller memory and activated automatically. **Show panel** command allows to restore program window. Launch **Exit** command to close program.

9.6. Button assignments report

You can create list of joystick controls assignment Fast Report format. Press **Srv** button on **Profile — Buttons — Physical layer** or **Logical layer** tab. Press **MakeMappingFile** in **Physical layer** dialog (Fig. 7.1 on p. 95). **Print Preview** window will appear (Fig. 9.8).

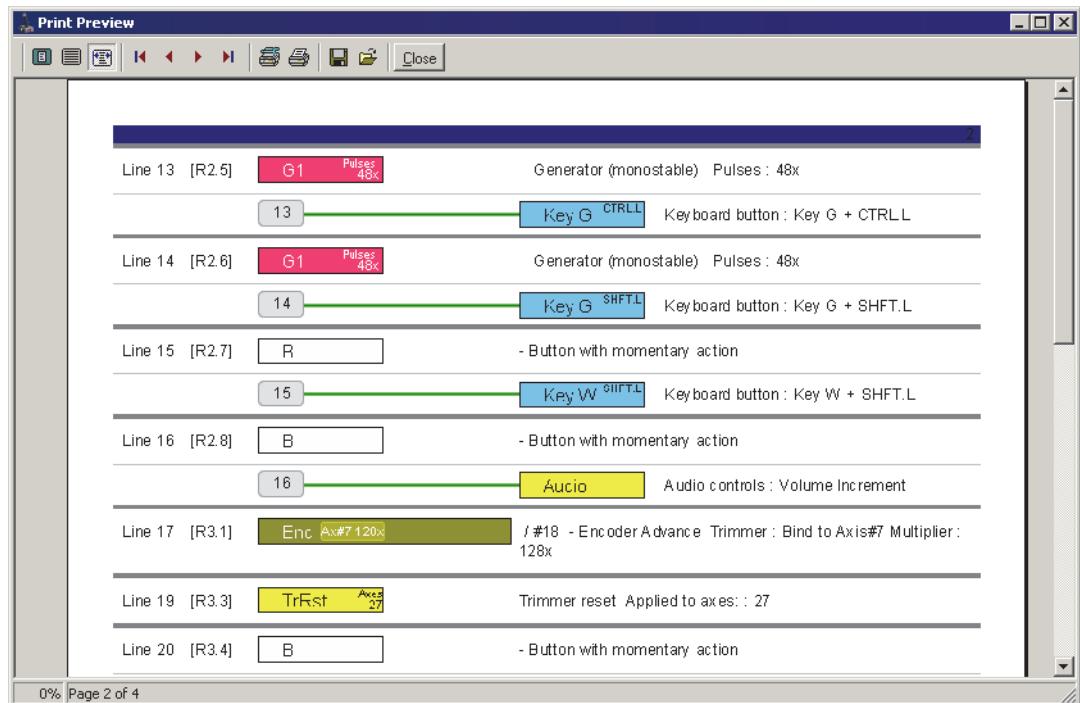


Fig. 9.8.

Physical and logical layer joystick controls assignments are shown in this window. Hover line number to see its assignments. Callout with needed data will appear (Fig. 9.9).

Reg#2	B	B	B
Reg#3	Enc Ax#7:128x	TrRst	Axes 27
Reg#4	B		
Reg#5	B	#17 / #18 - Encoder Advance Trimmer : Bind to Axis#7 Multiplier :	B
Reg#6	B	128x	B
Reg#7	B	B	B

Fig. 9.9.

Chapter 10. Testing controls

10.1. Testing using configuration

Open **Test** tab.

10.1.1. Lines testing

Open **Buttons/POVs** tab to test buttons, toggle switches, HATs, encoders etc. (Fig. 10.1). Activate controls and see results in this tab.

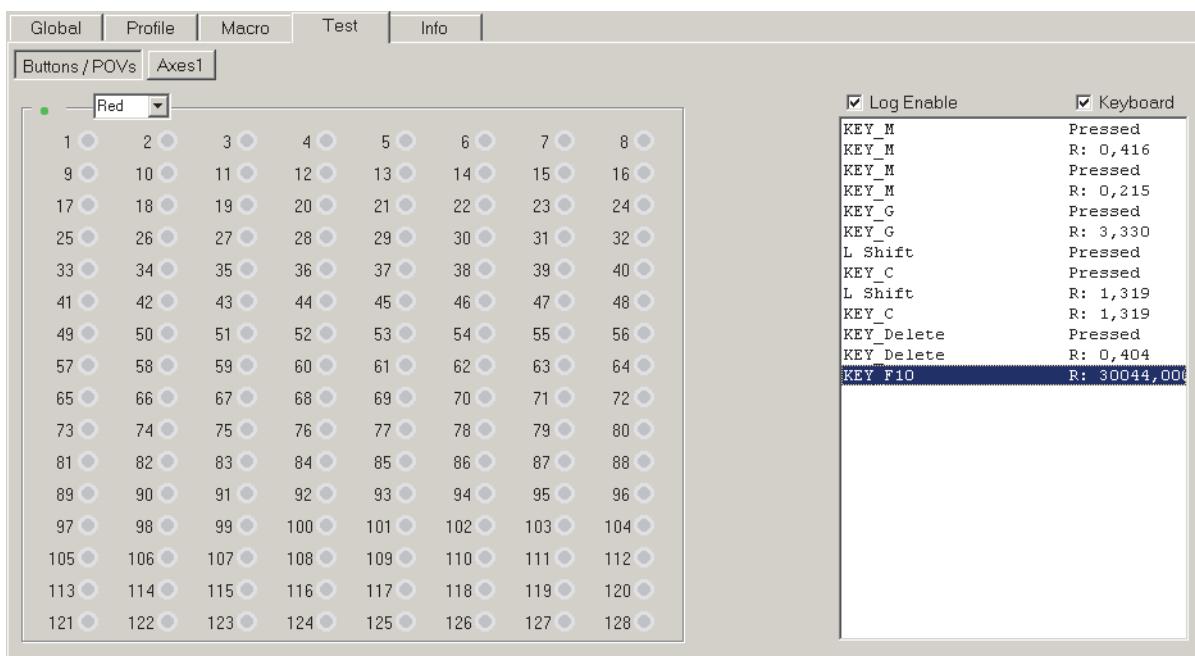


Fig. 10.1.

Check **Log enable** and **Keyboard** to test keyboard mapping.



If you have checked **Log enable** and **Keyboard** you must restart configurator after test completion.

10.1.2. Axes testing

Open **Axes1** tab to test joystick axes (Fig 10.2). Axis response is shown in graphical and digital forms.

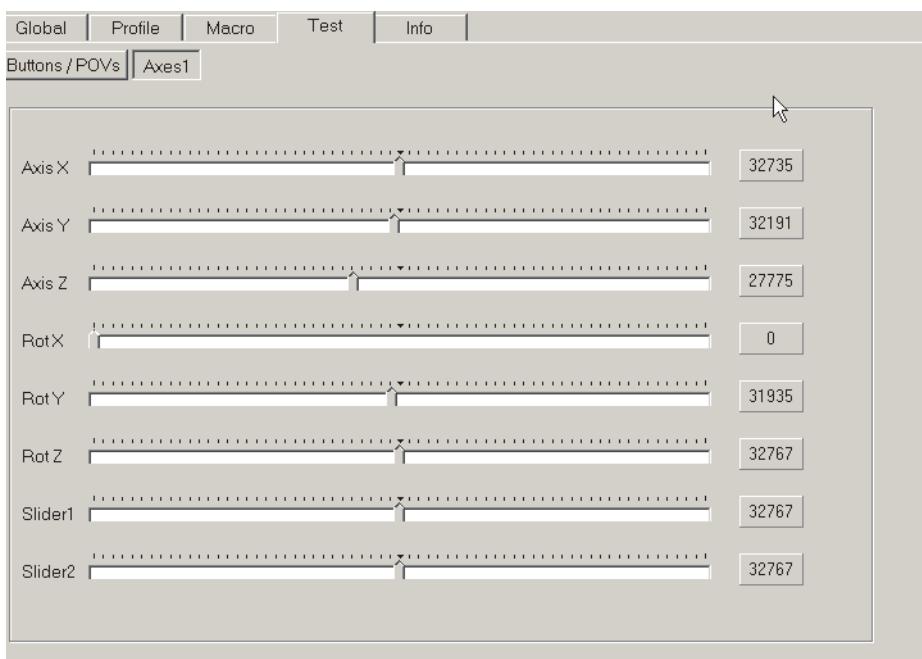


Fig. 10.2.

10.1.3. BUS testing

Open **External devices** tab to test BUS connection (Fig 10.3). Connection error level will be shown. BUS can be tested for Master device only.

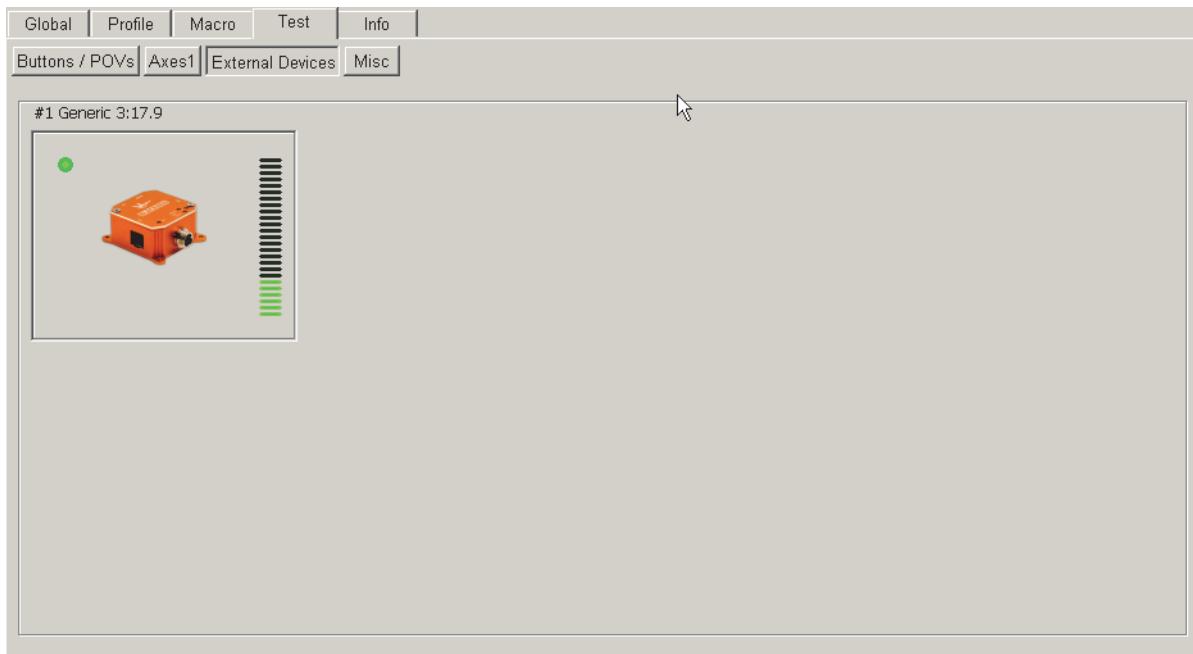


Fig. 10.3.

10.1.4. MARS and LEDs testing

Open **Misc** tab to test MARS sensors and LEDs (Fig 10.4).

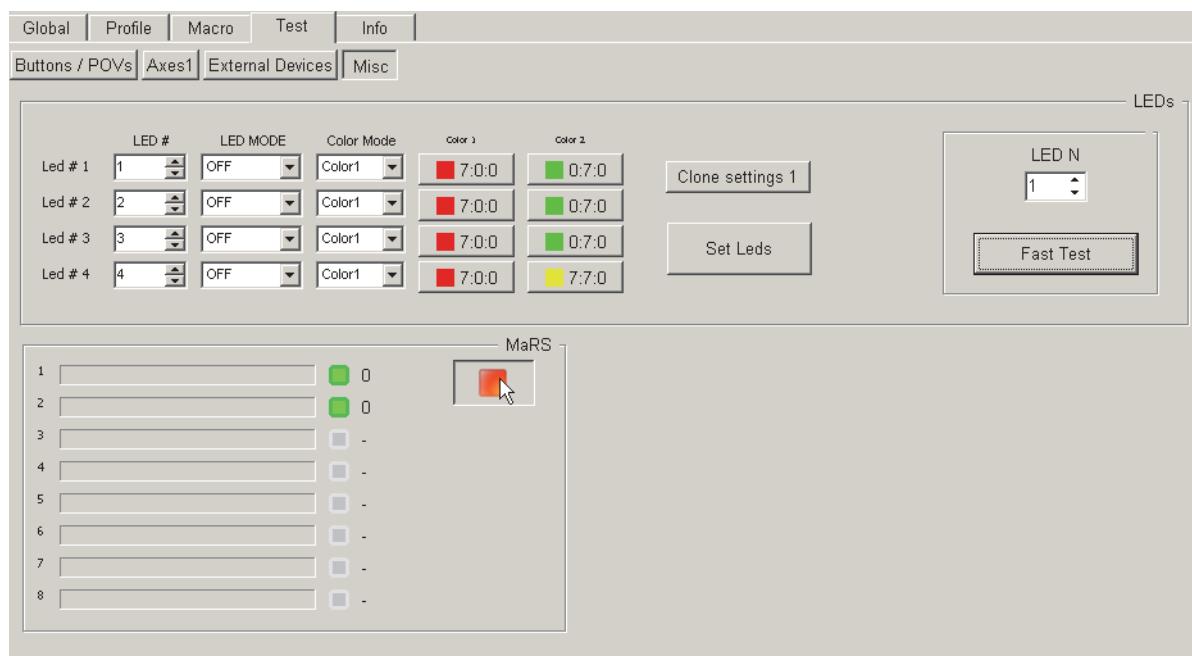


Fig. 10.4.

MARS testing

Press **MARS** button. If sensors work correctly you will see green marks. Red marks mean MARS failure.

LEDs testing

For testing purposes you can specify LED state. Choose LED number using **LED #** counter. Choose LED mode, color mode and color intensity. Press **Set Leds** button to apply settings.



Press **Restart** button on **Action** tab to restore current LED settings.

For instant test select LED number using **LED N** counter and press **Fast test** button. Chosen LED will flash.



You must append *Test Misc Enabled=1* string to *[Common]* section of *zconfig.ini* file to enable **Misc** tab.

Appendix I.Zconfig.ini file description

Overview

When you launch configuration utility for the first time configuration file *zconfig.ini* will automatically be created in the same folder with *VKBDevCfg.exe* file. It contains miscellaneous utility parameters. Some of them MUST be appended by user because of they are not created automatically. See description of certain parameters in Table 10.1.

Table. 10.1.

Section name	Parameter	Description
[Common]	Use matrix=1	Allows Row , Col , Base fields on Global — External tab.
[Common]	PageControlTop=1/0	Tab positions on top/bottom.
[Common]	SwapPL=1	Axes panels position. For this value Physical axes panel is on top.
[Common]	Release_DL=1	Buttons and axes testing is enabled after parameters activation. In case of some problems set Release_DL=0
[User]	ForcedWriteID=1	Enables to load profiles created for firmware versions that are not current.
[User]	User=Developer	Enables Macro, LEDs, virtual mouse using.
[Common]	Test Misc Enabled=1	Enables MARS sensors and LEDs testing.

